

 


Instruction Manual for Oslo 9 Drawer Chest

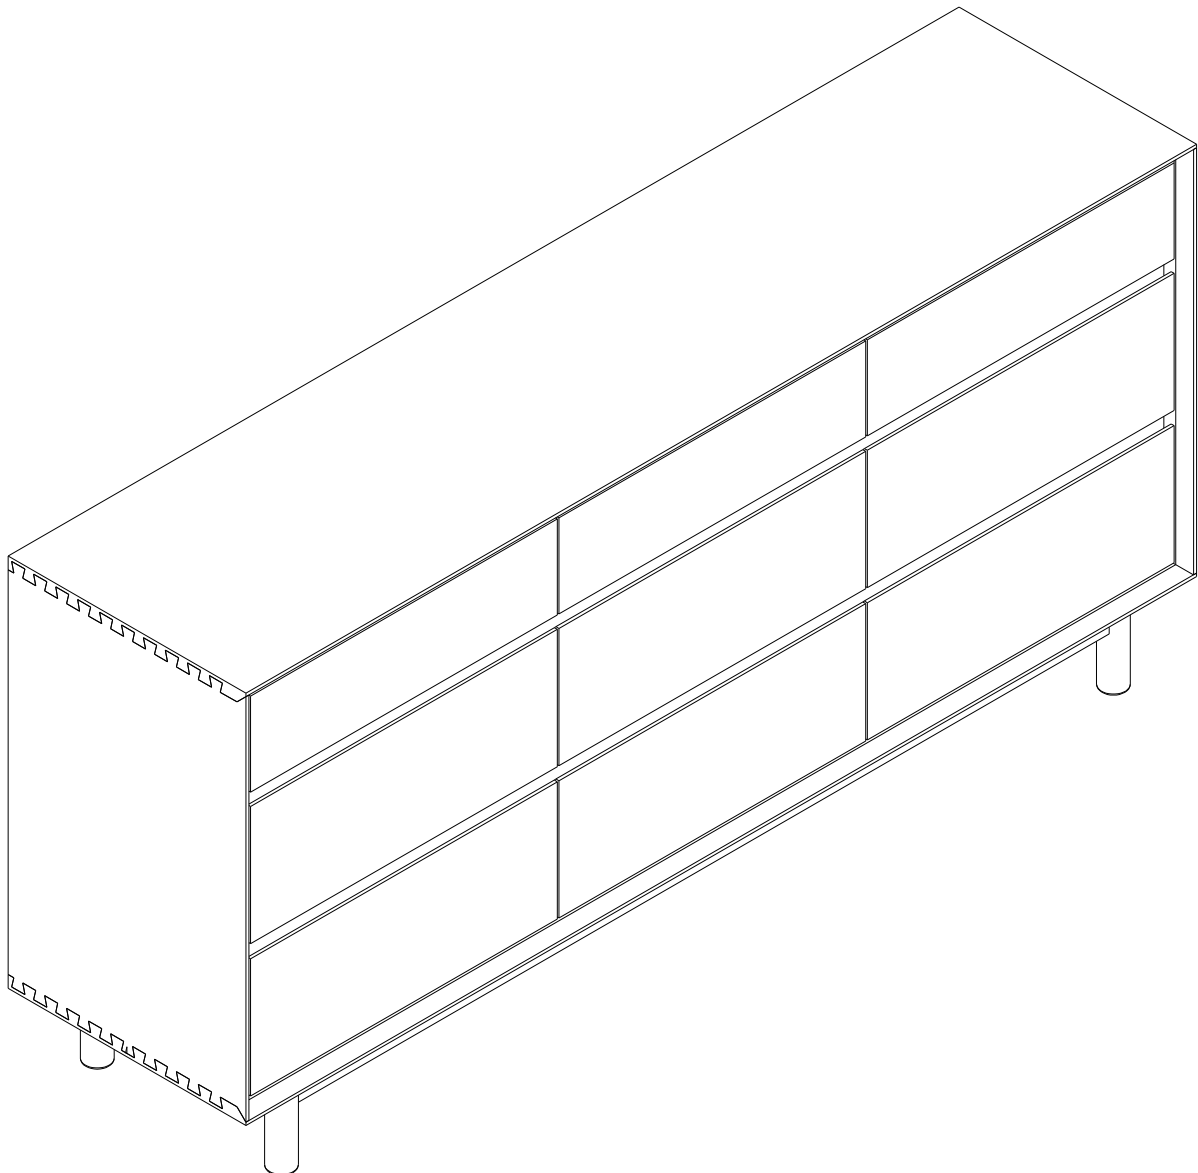


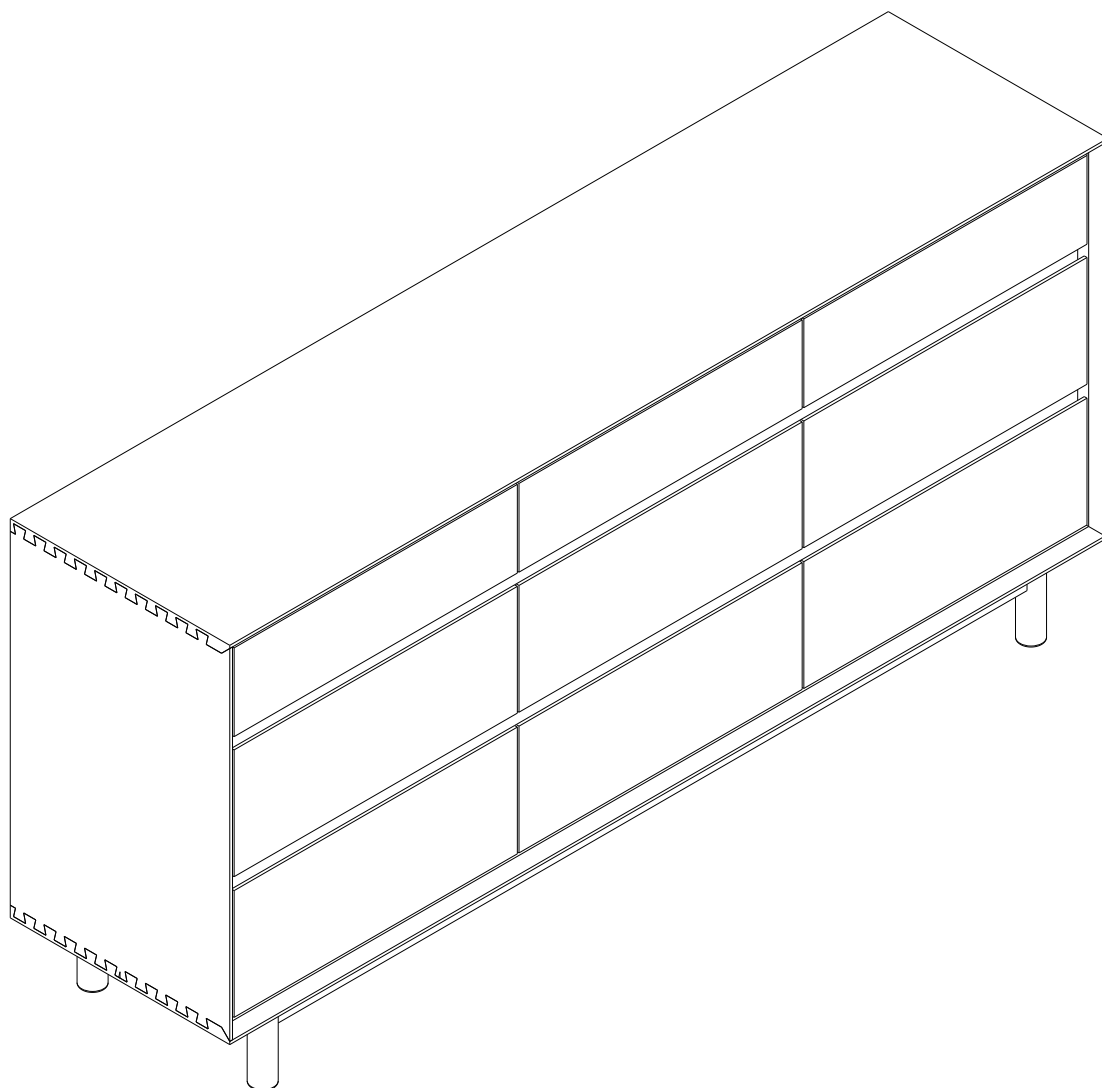


				
A.#14=1	B.M8=4	C. M8 Lock Washer=4	D. M8 Flat Washer=4	F=2





1

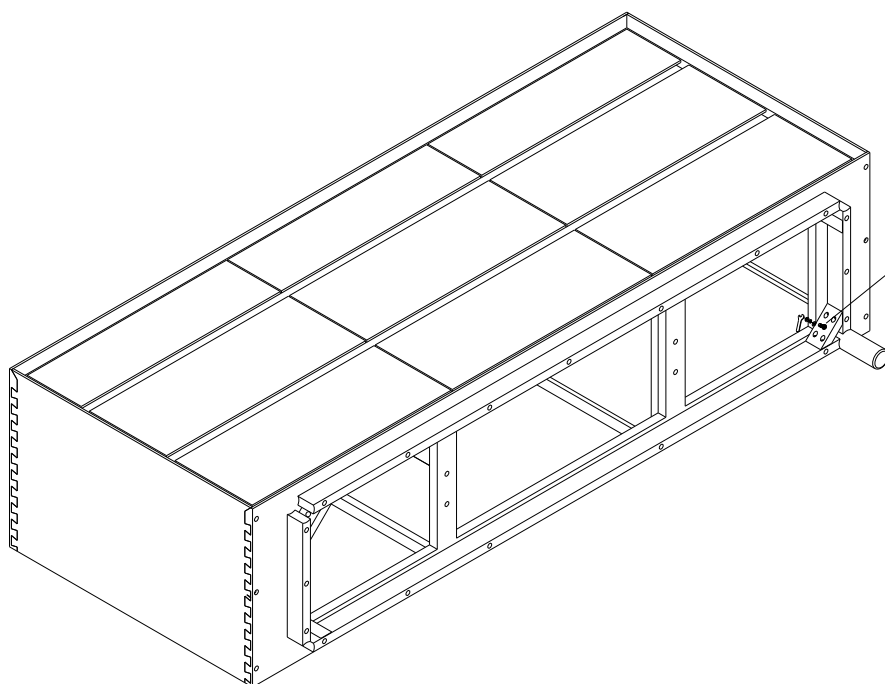

2

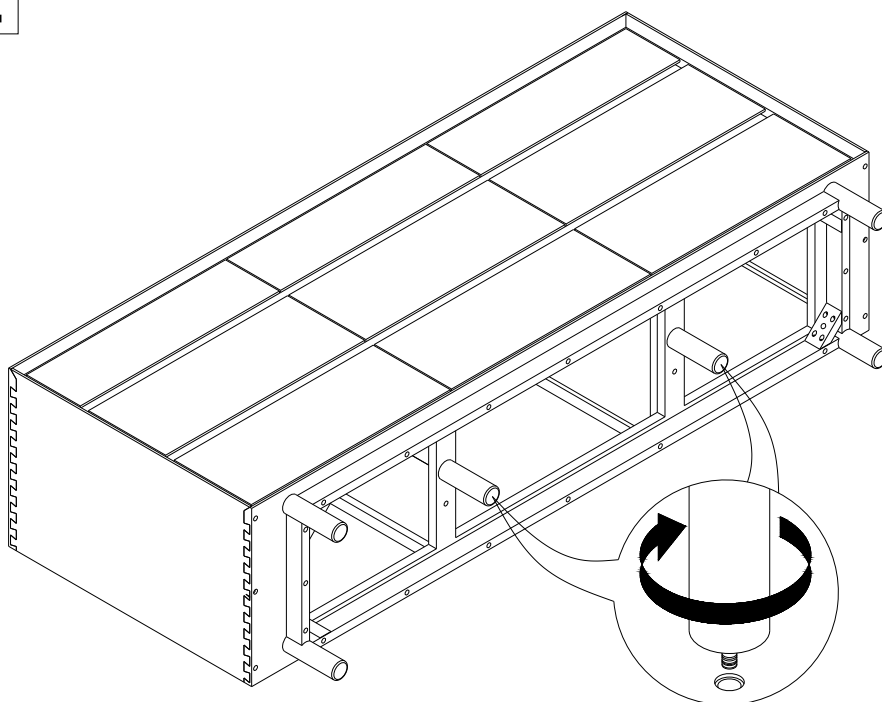

3

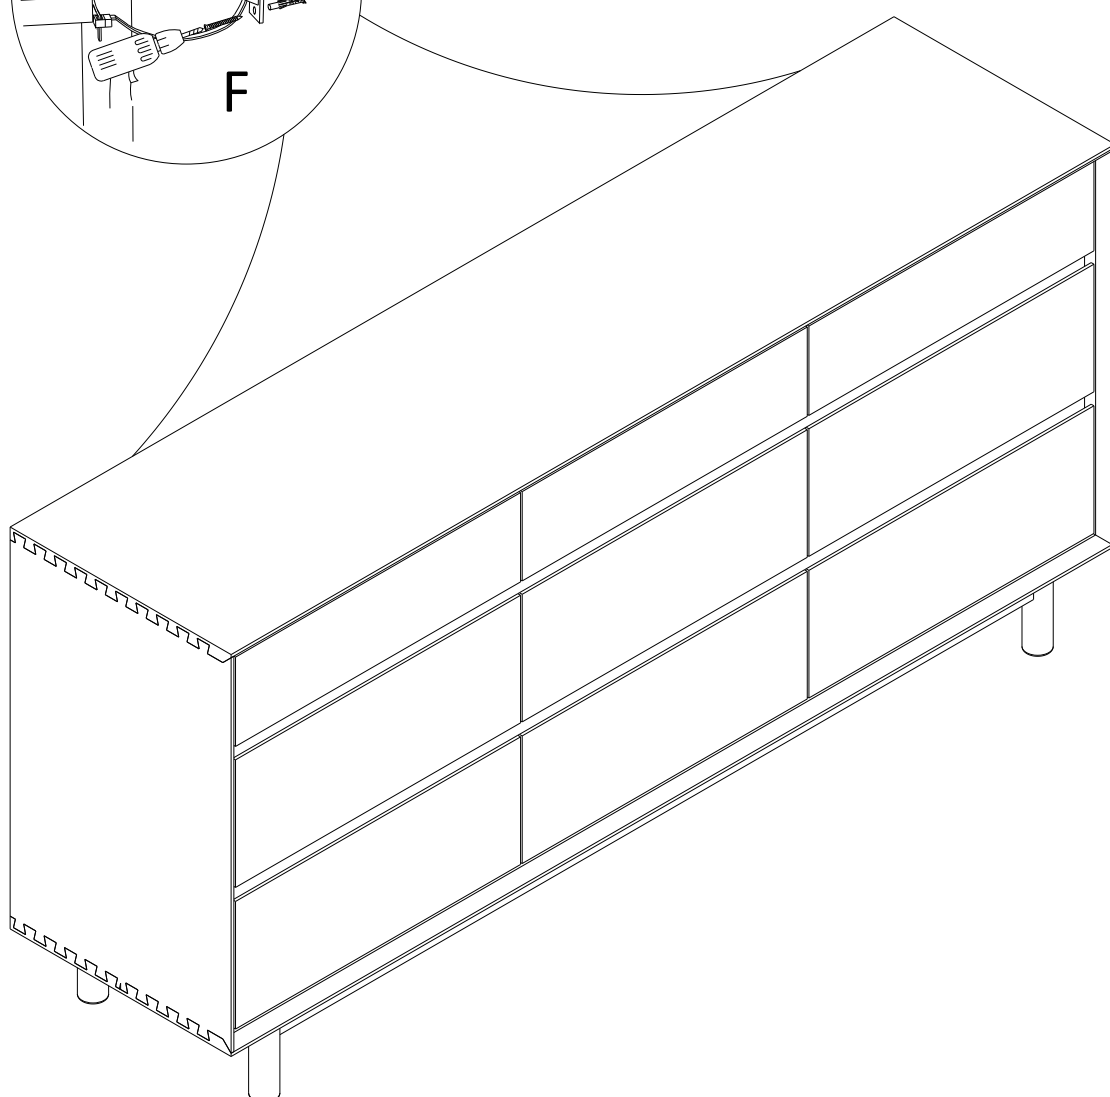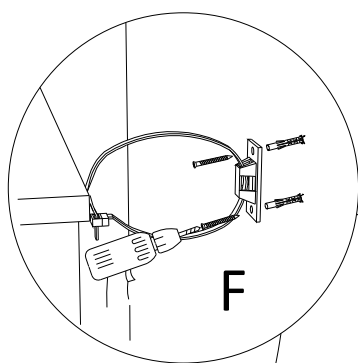

HARBOUR

LIFESTYLE

We know buying new furniture is exciting, and there's nothing quite like welcoming a brand-new piece into your home. To help it stay looking and feeling as good as the day it arrived, please follow these simple care tips:

- **Do not** drag or push the furniture; always lift it.
- Use coasters and mats for glassware, dinnerware, cups and mugs, as well as sharp items like cutlery.
- Use heat-resistant trivets for any hot dishes to protect the surface.
- Use felt pads on decorative items (e.g. vases, pots, heavy items).
- Place reed diffusers on a coaster or mat as any spilt oil may have an adverse effect on the surface of the furniture.
- Use a clean, slightly damp (not wet) lint-free or micro-fibre cloth to dust and then ensure the surface is left dry after cleaning.
- For spills, blot immediately to absorb the spill and avoid spreading it out.
- **Do not** use abrasive cleaning products or chemicals such as wire wool, bleach, acidic cleaners (like vinegar or lemon juice) or ammonia-based polishes.
- **Do not** use a steam cleaner.
- **Do not** place directly in front of a radiator or heat source, to prevent the furniture from drying out.

The guide above acts as a quick reference guide only. We recommend that you visit our help centre for the full guide on how to care for your specific furniture range using the QR code below.

