



Instruction Manual for Oslo Console Table

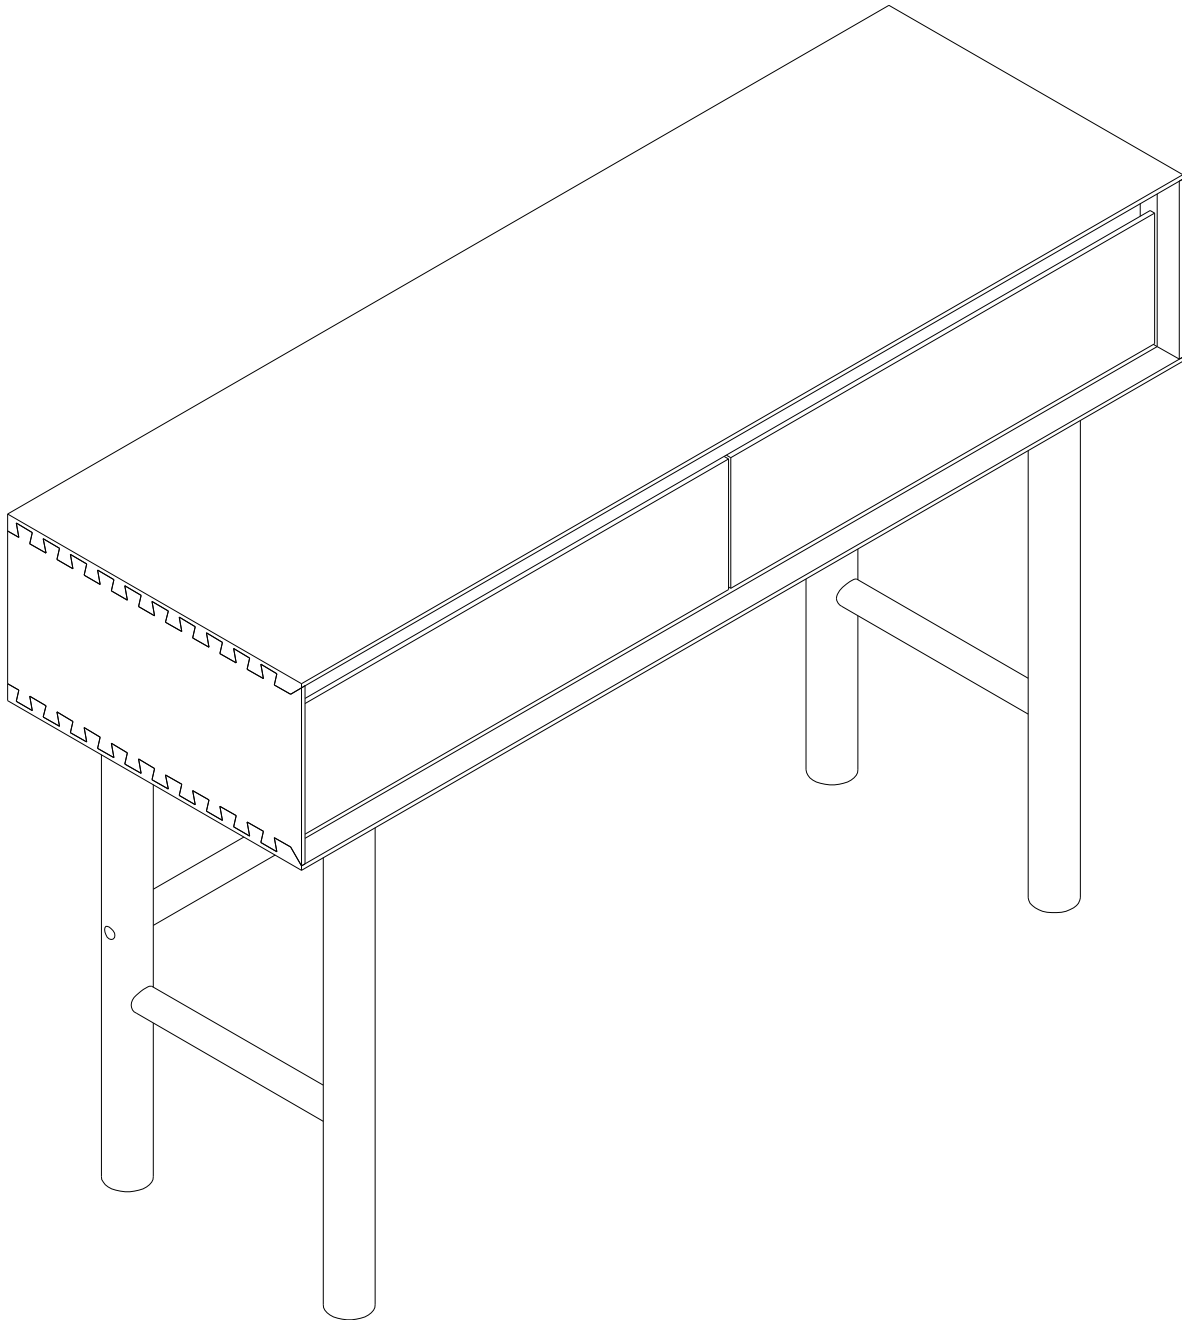


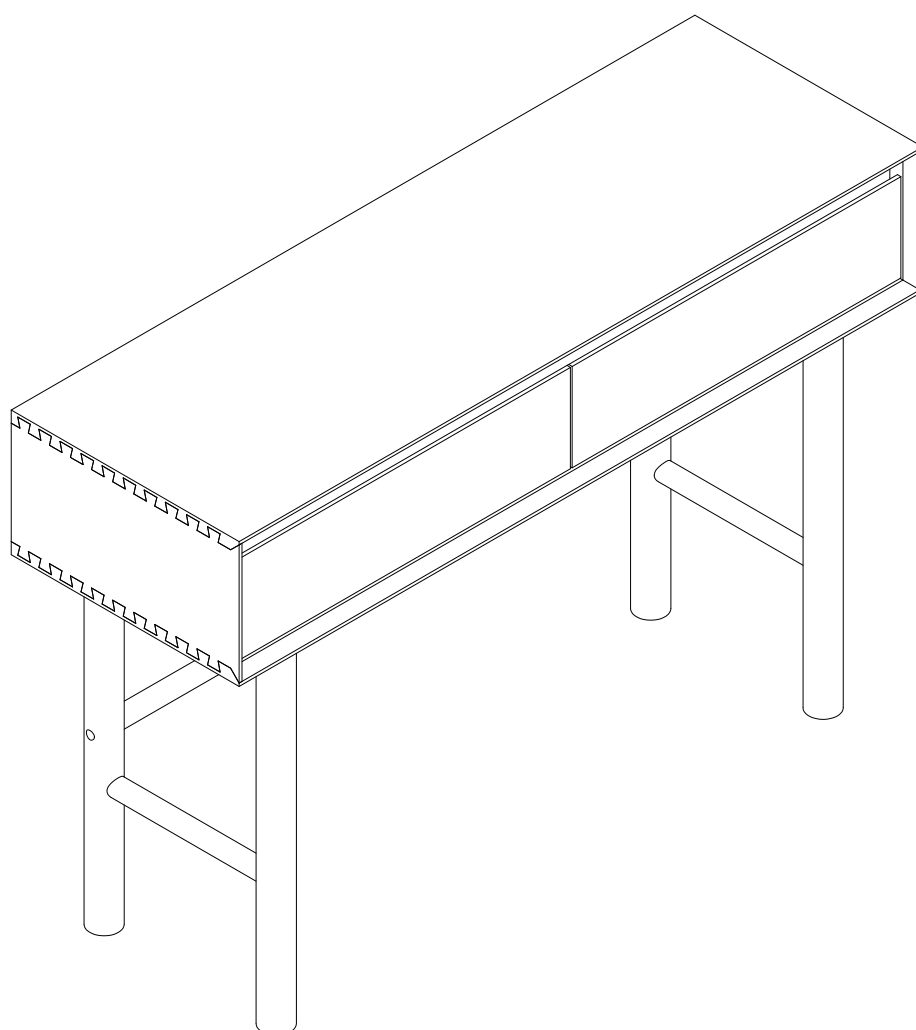


						
A. M8X50 Bolt=6	B. M8X70 Bolt=6	C. M8 Lock Washer=12	D. M8 Flat Washer=6	E=6	F. 5mm 'L' Allen Key	G=2




1

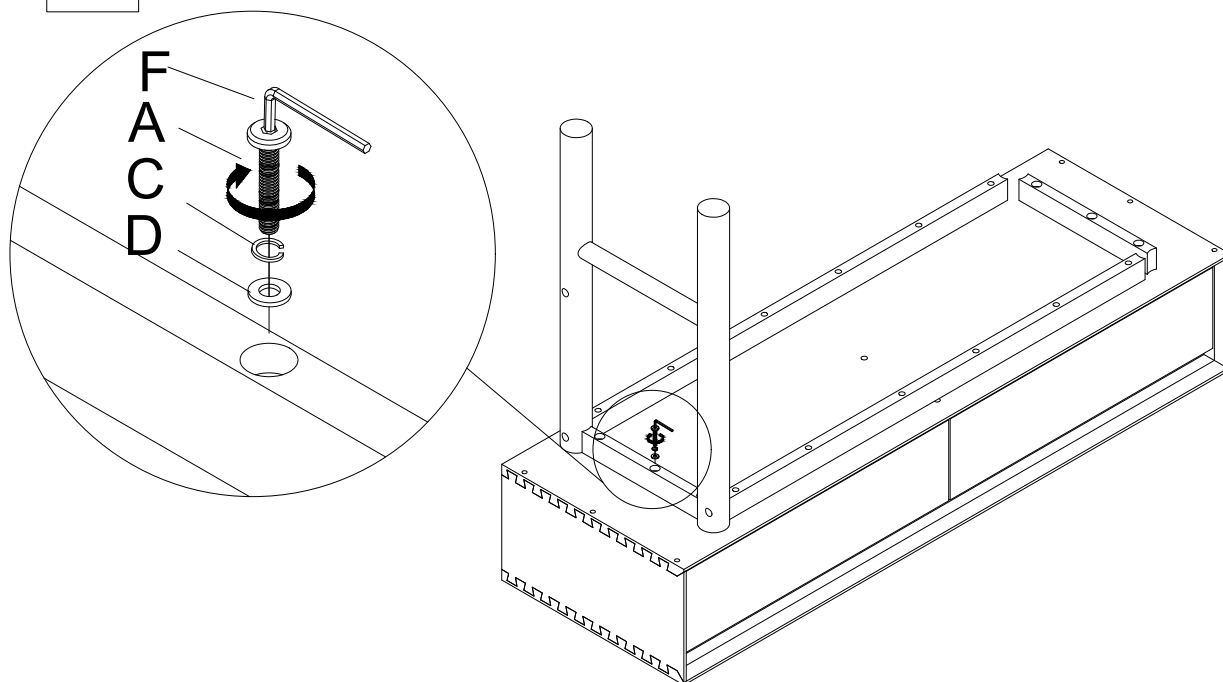


2

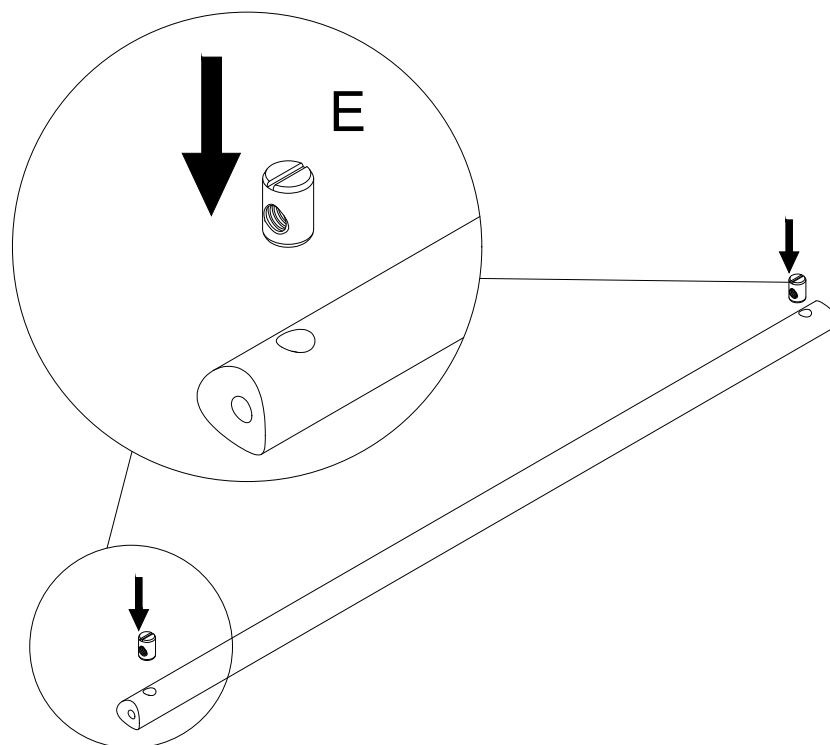


3

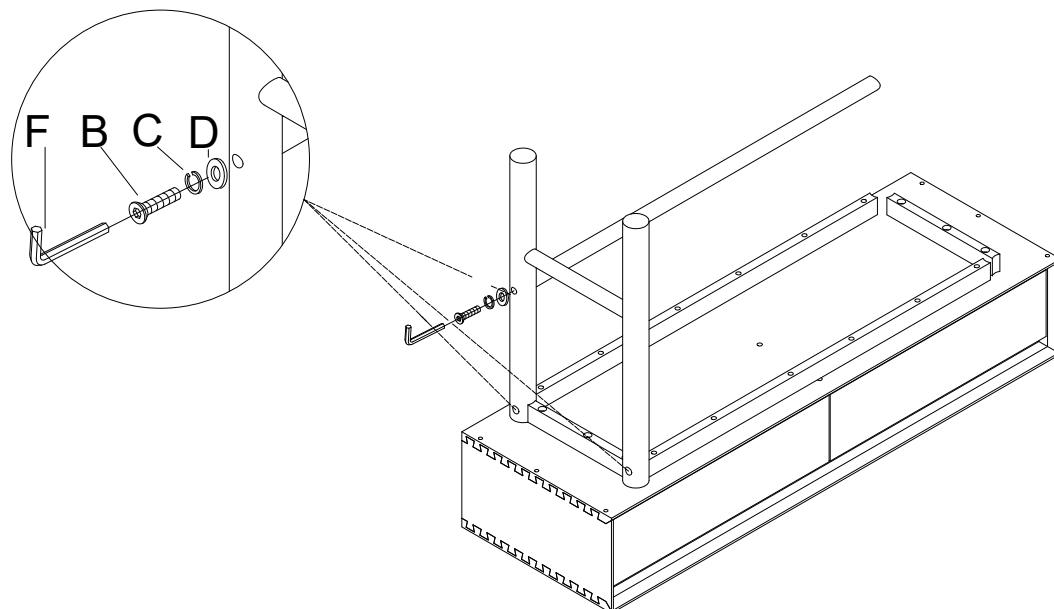


4

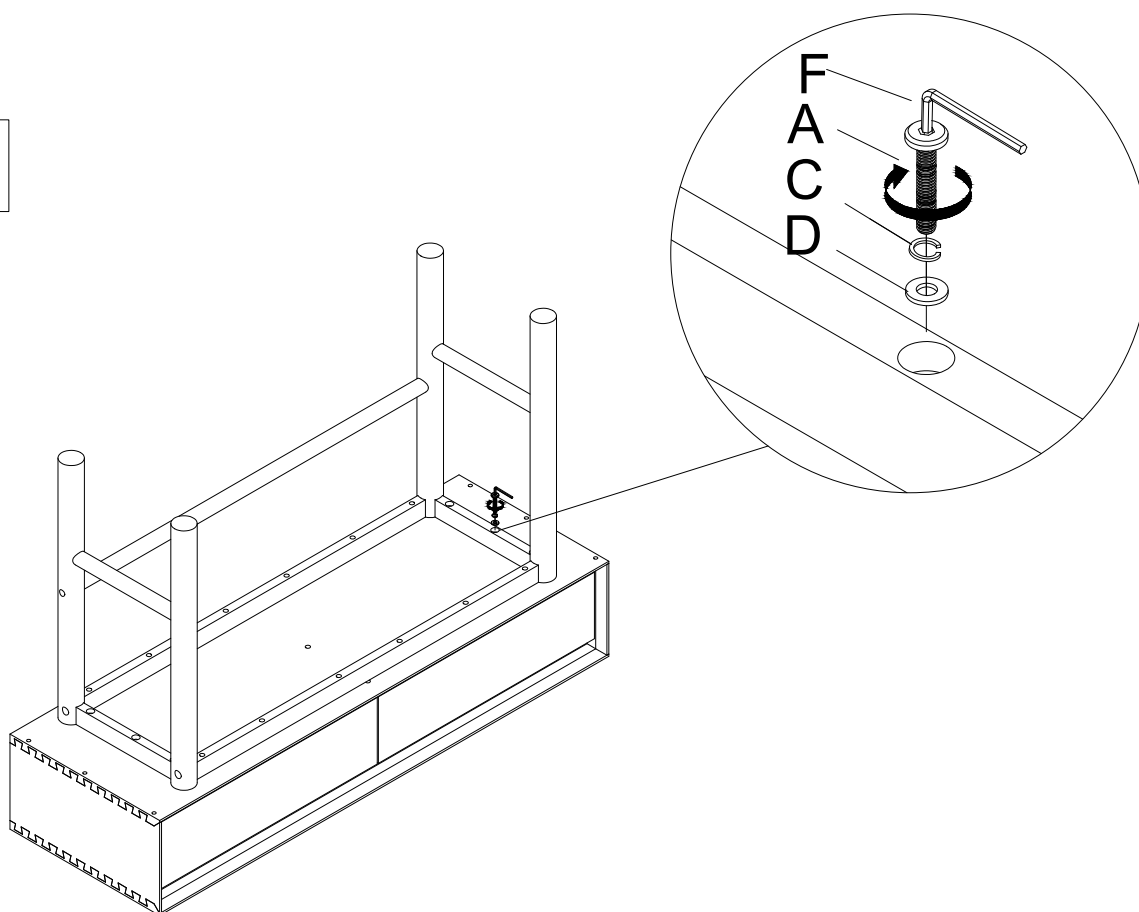

5

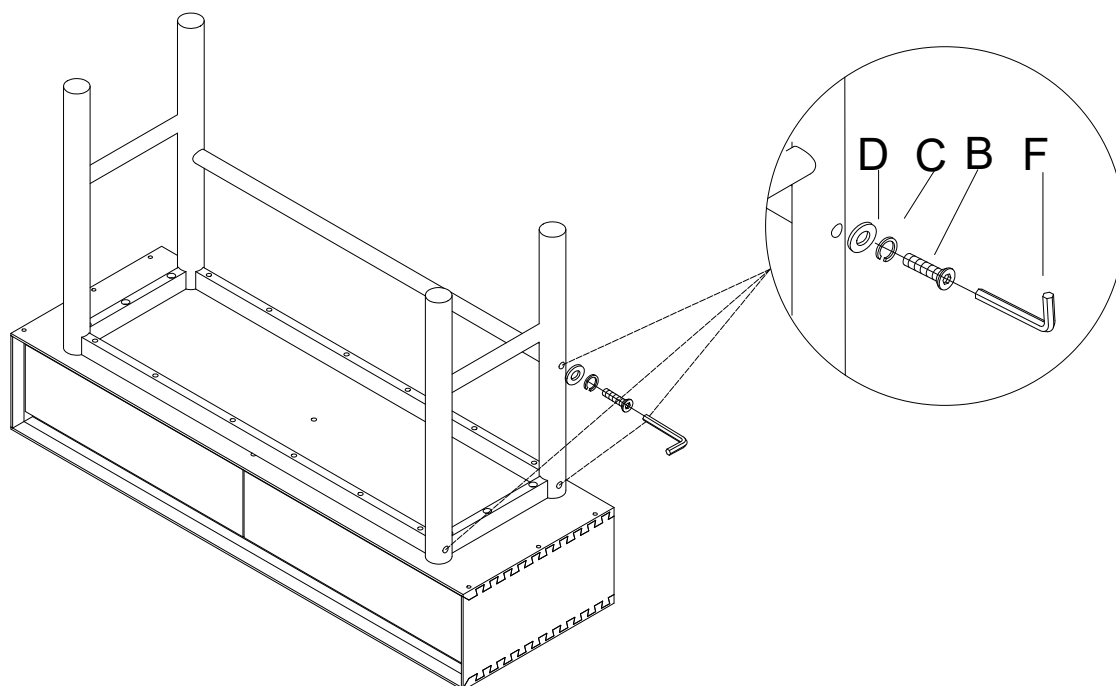

6

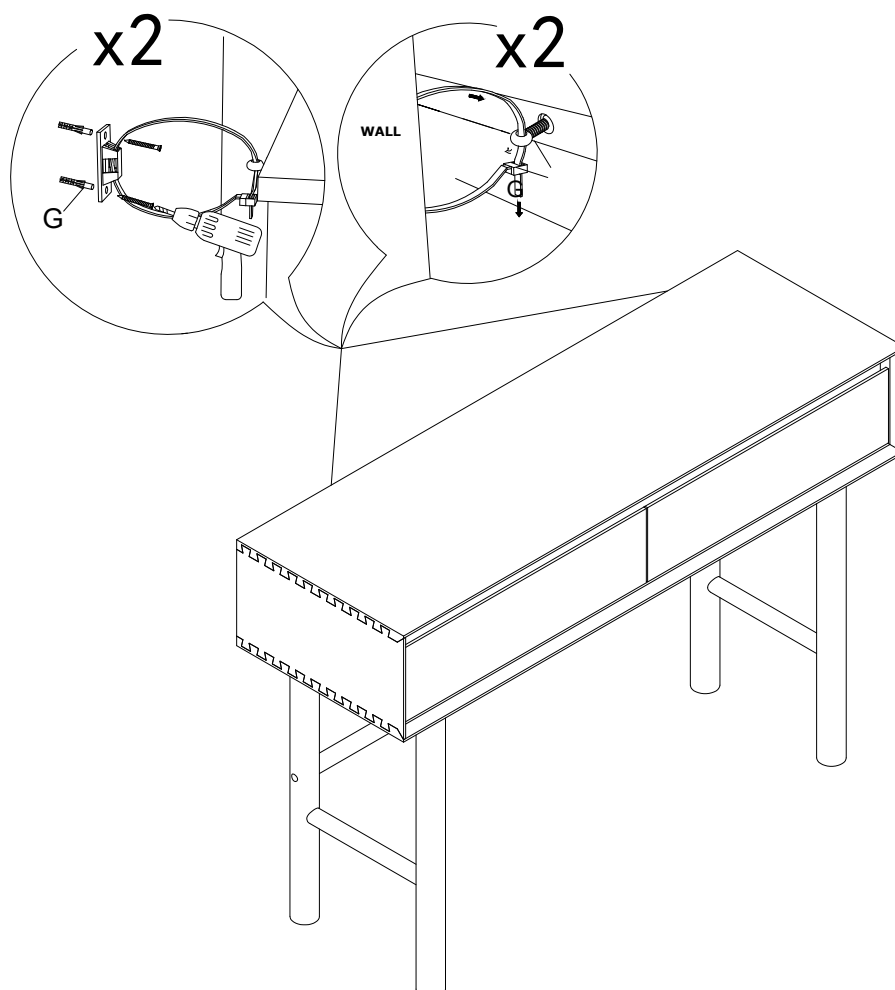

HARBOUR

LIFESTYLE

We know buying new furniture is exciting, and there's nothing quite like welcoming a brand-new piece into your home. To help it stay looking and feeling as good as the day it arrived, please follow these simple care tips:

- **Do not** drag or push the furniture; always lift it.
- Use coasters and mats for glassware, dinnerware, cups and mugs, as well as sharp items like cutlery.
- Use heat-resistant trivets for any hot dishes to protect the surface.
- Use felt pads on decorative items (e.g. vases, pots, heavy items).
- Place reed diffusers on a coaster or mat as any spilt oil may have an adverse effect on the surface of the furniture.
- Use a clean, slightly damp (not wet) lint-free or micro-fibre cloth to dust and then ensure the surface is left dry after cleaning.
- For spills, blot immediately to absorb the spill and avoid spreading it out.
- **Do not** use abrasive cleaning products or chemicals such as wire wool, bleach, acidic cleaners (like vinegar or lemon juice) or ammonia-based polishes.
- **Do not** use a steam cleaner.
- **Do not** place directly in front of a radiator or heat source, to prevent the furniture from drying out.

The guide above acts as a quick reference guide only. We recommend that you visit our help centre for the full guide on how to care for your specific furniture range using the QR code below.



www.harbourlifestyle.co.uk

If you have any questions or require additional support, please contact the team at customerservices@harbourlifestyle.co.uk. Alternatively you can contact us via telephone on 0330 808 1744.