
HARBOUR
LIFESTYLE

ASSEMBLY, USE AND CARE INSTRUCTIONS

Vesta Outdoor Kitchen Low BBQ Cabinet Unit

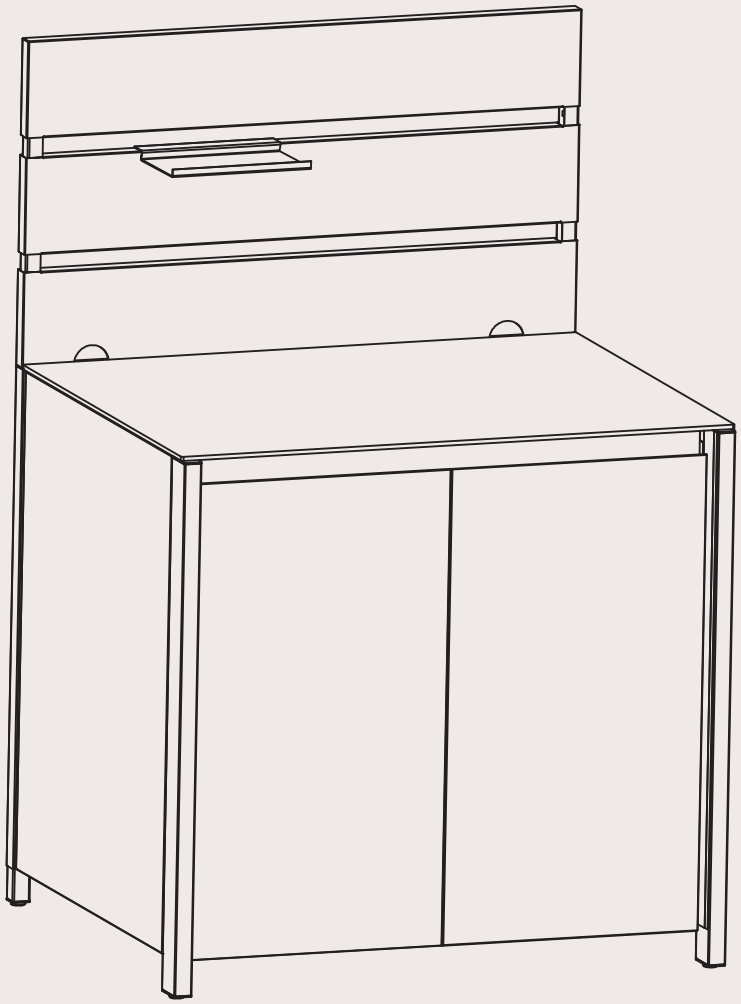

Please read these instructions fully before assembly and use, and keep them for future reference.

If you have any questions or require additional support, please contact the team at customerservices@harbourlifestyle.co.uk. Alternatively you can contact us via telephone on 0330 808 1744 (Monday to Friday, 10am - 4pm).

02 Contents

01	Cover	1
02	Contents and welcome	2
03	Safety and proper use	3
04	Parts and tools	4
05	Site selection	6
06	Assembly instructions	7
07	Care and maintenance	13
08	Troubleshooting	14
09	Disposal and recycling	15
10	Compliance information	15

Welcome

Thank you for choosing Harbour Lifestyle. Your Low BBQ Cabinet Unit is part of the Vesta modular outdoor kitchen range: units that can be used on their own or joined together in the layout you choose.

Keep this manual with the product and pass it on to any new owner.

Product at a glance

SPECIFICATION	DETAIL
SKU	VST-2DR-80-BBQ-DBP-GR (Grey); VST-2DR-80-BBQ-DBP-LAT (Latte)
Colours	Grey, Latte
Width	80 cm
Materials	Galvanised steel frame with Tiger Drylac powder coating; sintered stone worktop
Features	Lower worktop for a barbecue, adjustable feet, magnetic door catches
Assembly	Self-assembly. Allen key and screwdriver supplied. Two people needed

03 Safety and proper use

Read every warning before assembling or using the unit, and make sure everyone who uses your outdoor kitchen knows these rules.

INTENDED USE

This low cabinet is part of the Vesta modular outdoor kitchen range, for a private, domestic garden. It is designed to hold a barbecue at a comfortable cooking height, with storage below. It is for outdoor use only and is not intended for commercial use.

⚠ WARNING **Heavy parts and tipping**

- Some parts, especially the sintered stone worktop, are heavy. Assemble the unit with two people and lift with care.
- Do not stand, sit or climb on the unit, and do not lean or hang weight on an open door or on the splashback.
- Only use the unit on a firm, level surface, with the feet adjusted so it cannot rock.

⚠ CAUTION **Cuts and trapped fingers**

- Metal parts may have sharp edges. Wear gloves during unpacking and assembly.
- Be careful of shear and squeeze points: keep fingers clear of hinges and door gaps. Do not let children play with or hide in the unit.
- The fittings pack contains small parts. Keep them, and all packaging, away from young children.

⚠ WARNING **Using a barbecue on the cabinet**

- Follow the barbecue manufacturer's instructions, including its clearances to combustible materials and overhead.
- Never use a barbecue indoors or in any enclosed space: it produces carbon monoxide, which can kill.
- Do not store gas cylinders in the cabinet unless the barbecue manual allows it, and never store spare cylinders, lighter fluid or firelighters in it.
- Do not move the cabinet while the barbecue is lit or hot.

ⓘ NOTE **Storage**

- Do not store gas cylinders, petrol, lighter fluid, aerosols, pool chemicals or other flammable or corrosive products in the unit.
- Do not overload the shelves or the worktop. Spread heavy items evenly.

04 Parts and tools

Remove all packaging and protective film. Check every part against these lists before you start, and keep the fixings in their bags until you need them.

FIXINGS AND TOOLS SUPPLIED

PART	QTY	DESCRIPTION
AA	33	Screw M6 x 15 mm
AB	13	Screw M6 x 40 mm
AC	1	Allen key
AD	1	Screwdriver







BEFORE YOU START

- Assemble the unit close to where it will stand, on a soft clean surface such as the flattened carton, to avoid scratching the finish.
- Two people are needed to lift the worktop and to stand the unit up.
- Fit all the screws in a step loosely first, then tighten them once the parts are lined up. Do not over-tighten.

NOTE **Check every part before you start**

- Check all parts and fixings against the lists on this page and the next before you begin. If anything is missing or damaged, stop and contact customerservices@harbourlifestyle.co.uk quoting your order number and the part letter.
- Do not assemble damaged parts.

PARTS

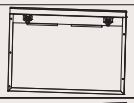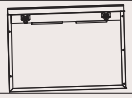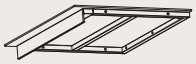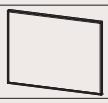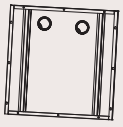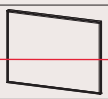PARTS NO	QTY	DESCRIPTION
A	1	
B	1	
C	1	
D	1	
E	2	
F	1	
G	1	
H	1	
I	1	

PARTS NO	QTY	DESCRIPTION
J	1	
K	1	
L	1	
M	2	
N	1	
O	2	
P	2	
Q	2	

05 Site selection

A firm, level base keeps the doors aligned and the units square to each other.

CHOOSING THE POSITION

- Place the unit outdoors on a hard, level, freely draining surface such as paving or a concrete slab. Do not stand it on grass, soil or loose gravel.
- Choose a spot where water cannot collect around the feet, with enough room in front for the doors to open fully.
- A sheltered position, or a fitted cover when not in use, protects the finish and keeps the inside dry.
- Check the barbecue manual for the clearances it needs to fences, walls, plants and anything overhead, and position the cabinet to suit.

LEVELLING


- The unit stands on adjustable feet. Once it is in position, turn the feet until the unit is level front to back and side to side. Check with a spirit level.
- Level each unit before you join it to the next one.

JOINING VESTA UNITS

- Vesta units can stand on their own or be joined side by side, or at a corner with the Vesta Corner Unit.
- The joining plates (Q) and brackets (P) are supplied with each unit. The last steps of the assembly section show how to use them.

06 Assembly instructions


Follow the steps in order. Fit screws loosely until each step is complete. The letters match the parts list.

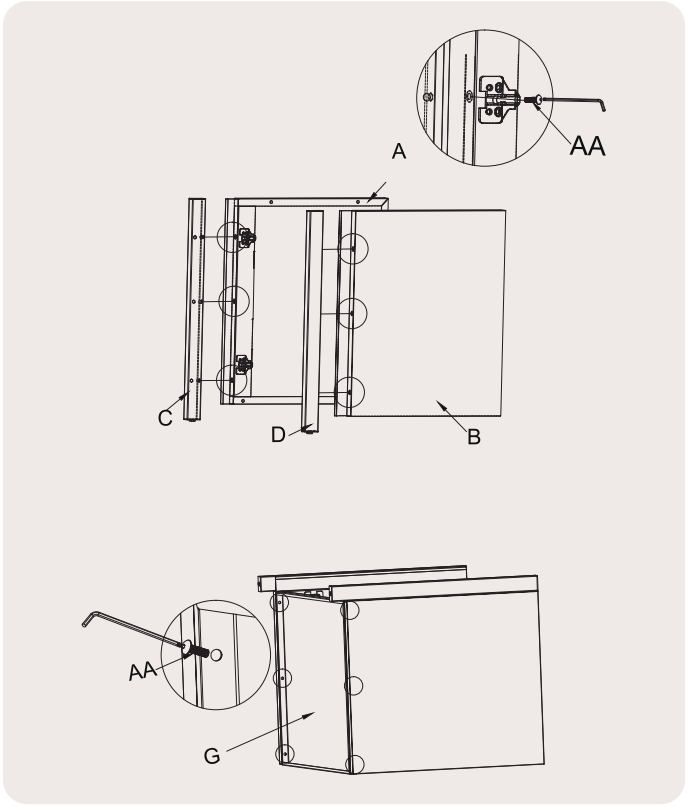

1 Fit the front legs and bottom panel

PARTS A B C D G AA


1. Lay side panel A on a soft surface and fix front leg C to it with AA screws. Fix front leg D to side panel B in the same way.
2. Fix the bottom panel (G) to the side panels with AA screws, as shown in the lower drawing.

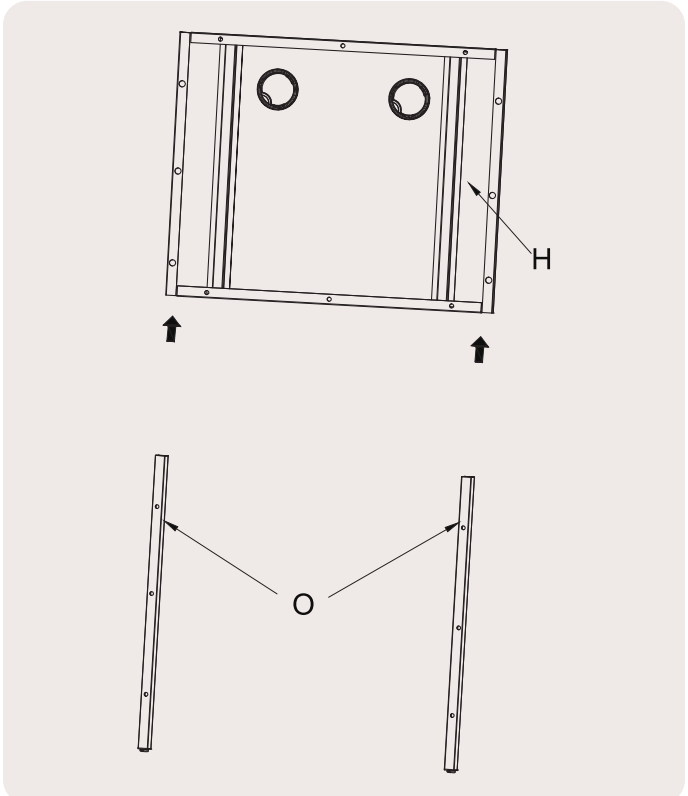

2 Fit the back legs

PARTS H O x2


1. Push the two back legs (O) into the bottom of the back panel (H), as shown by the arrows.

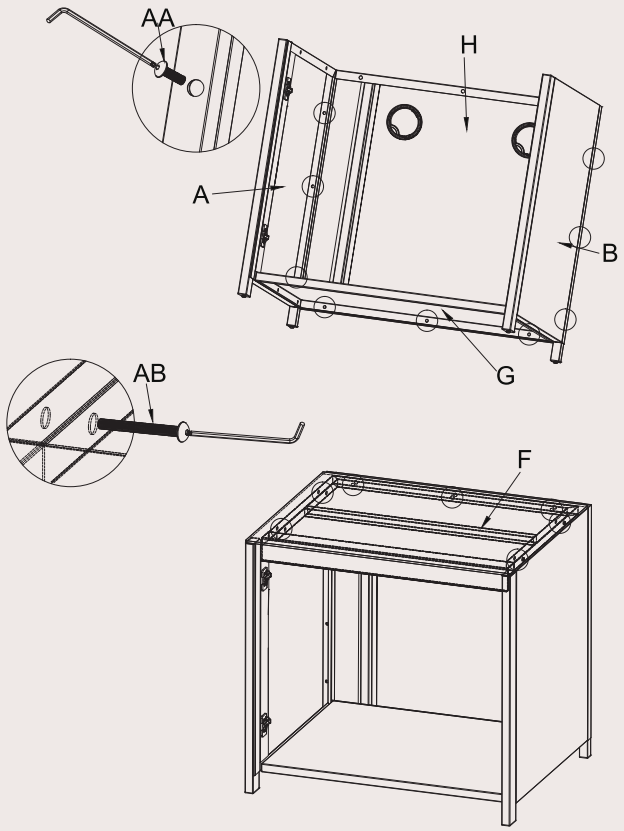

3 Assemble the cabinet and fit the worktop

PARTS H G AA F AB


1. Stand the parts up and fit the back panel (H) between the two side panels, on the bottom panel (G). Fix it with AA screws.
2. With a helper, lower the worktop (F) onto the frame and fix it with the long AB screws, as shown in the detail.

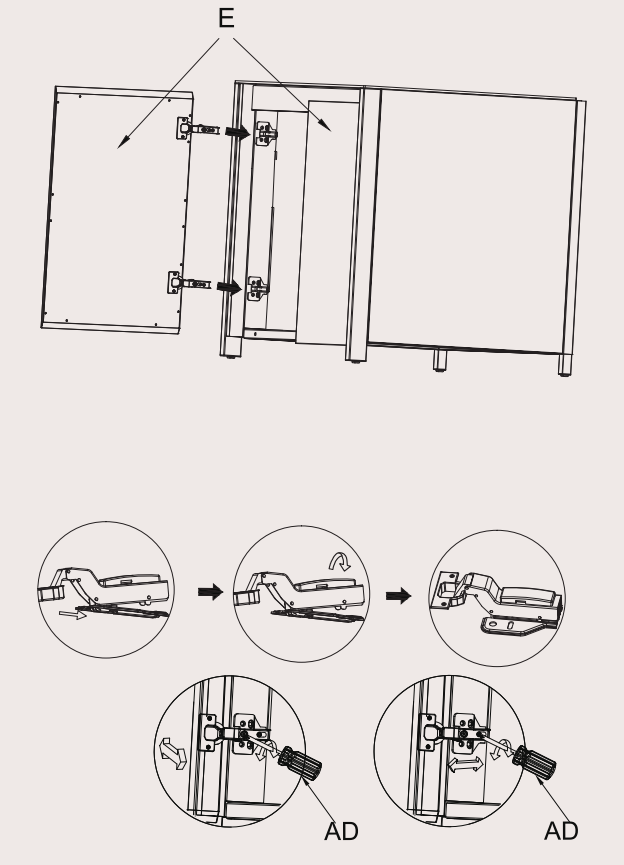

4 Hang the doors

PARTS E x2 AD


1. Slide each hinge on the door (E) onto its hinge plate on the cabinet, then press it down until it clicks into place.
2. Adjust the hinges with the screwdriver (AD) until the door hangs straight and closes flush: one screw moves the door sideways, the other moves it in and out.
3. Magnetic catches hold the doors closed.

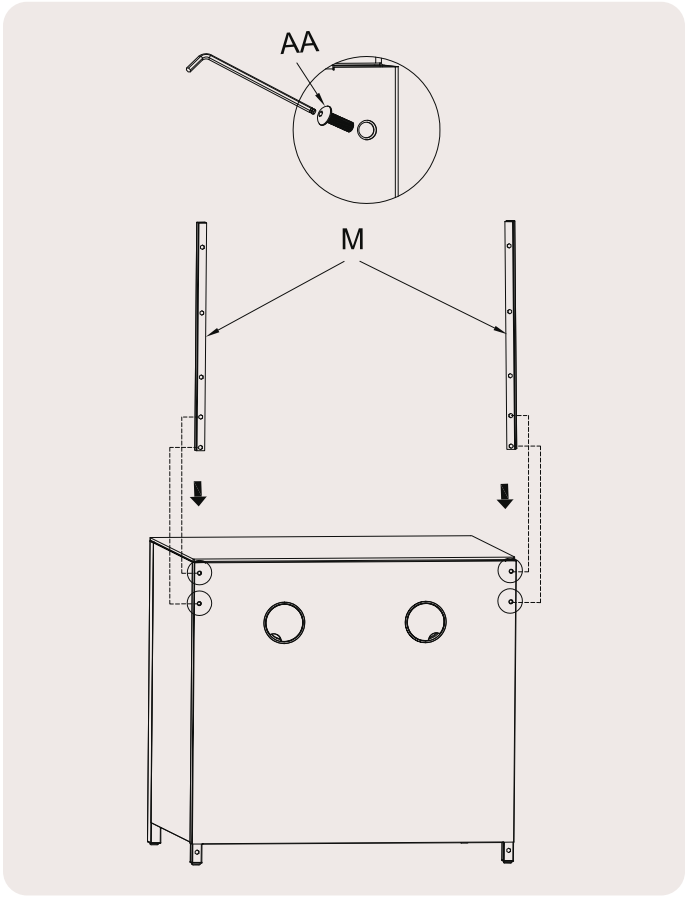

5 Fit the splashback uprights

PARTS M x2 AA


1. Fix the two uprights (M) to the top of the back legs with AA screws, as shown in the detail.

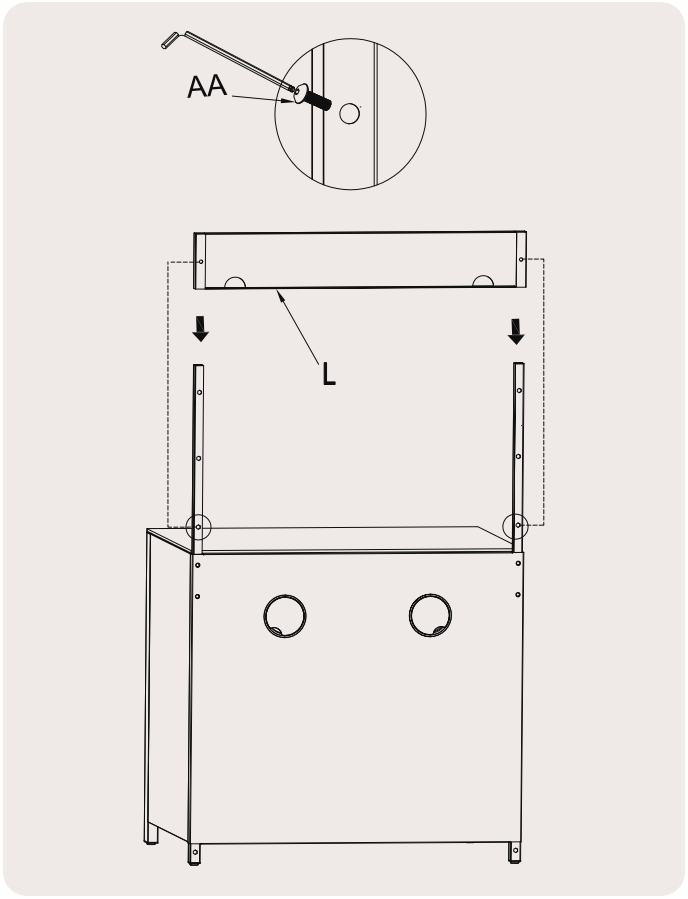

6 Fit splashback panel L

PARTS L AA


1. Lower panel L between the uprights at the lower holes and fix it with AA screws at each end.

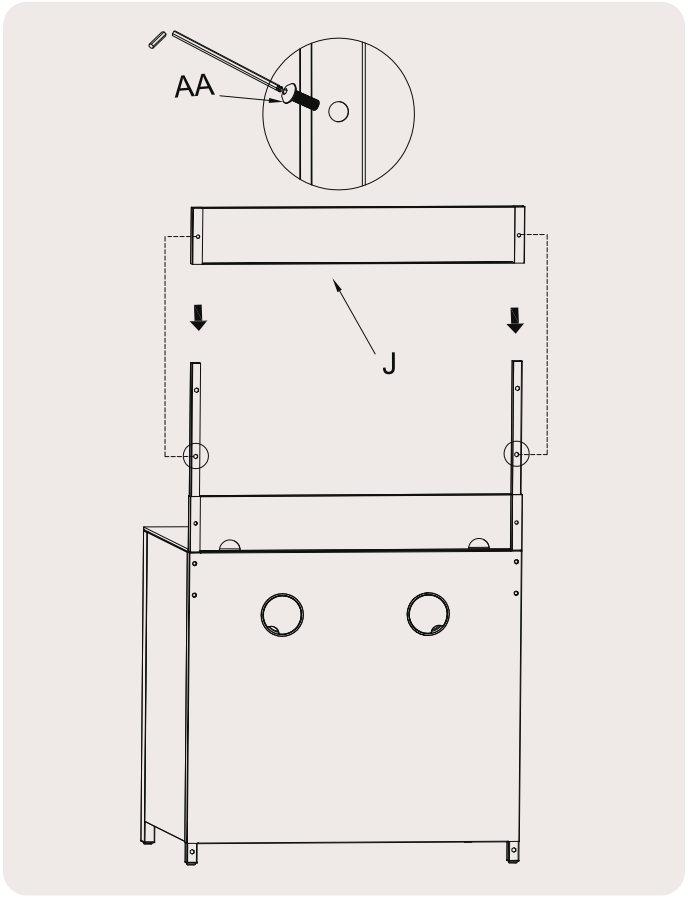

7 Fit splashback panel J

PARTS J AA


1. Lower panel J between the uprights above panel L and fix it with AA screws at each end.

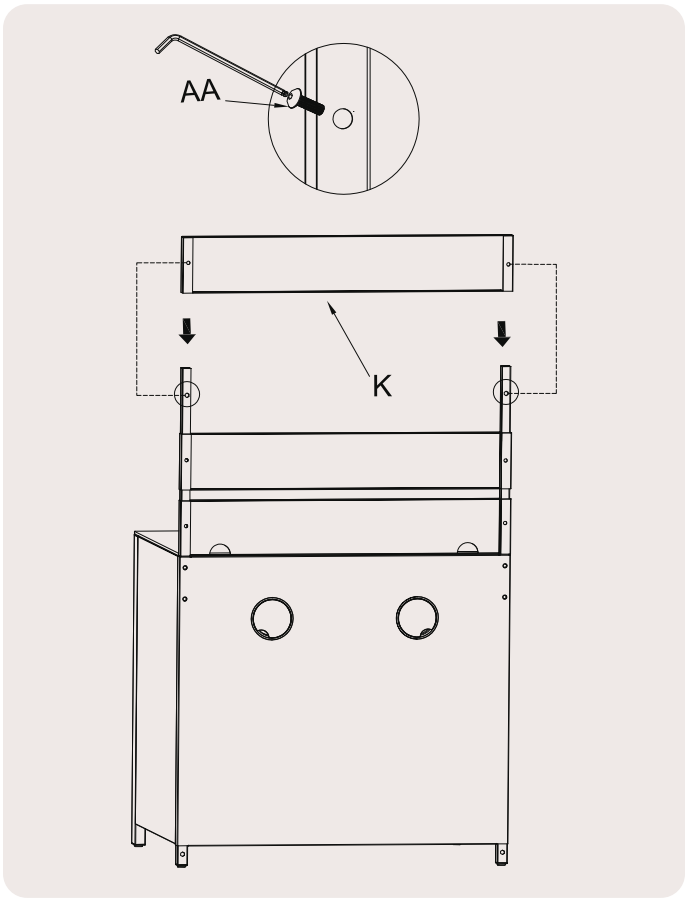

8 Fit splashback panel K

PARTS K AA


1. Lower panel K between the uprights at the top and fix it with AA screws at each end.

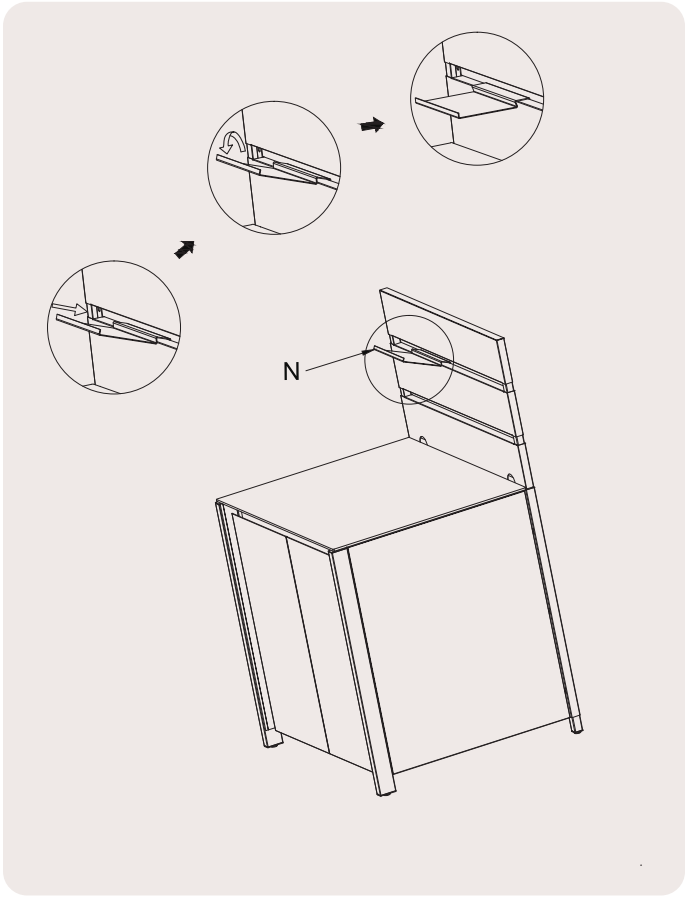

9 Fit the utensil shelf

PARTS N


1. Hook the utensil shelf (N) into the slot in the splashback, then tilt it down until it sits level, as shown in the details.

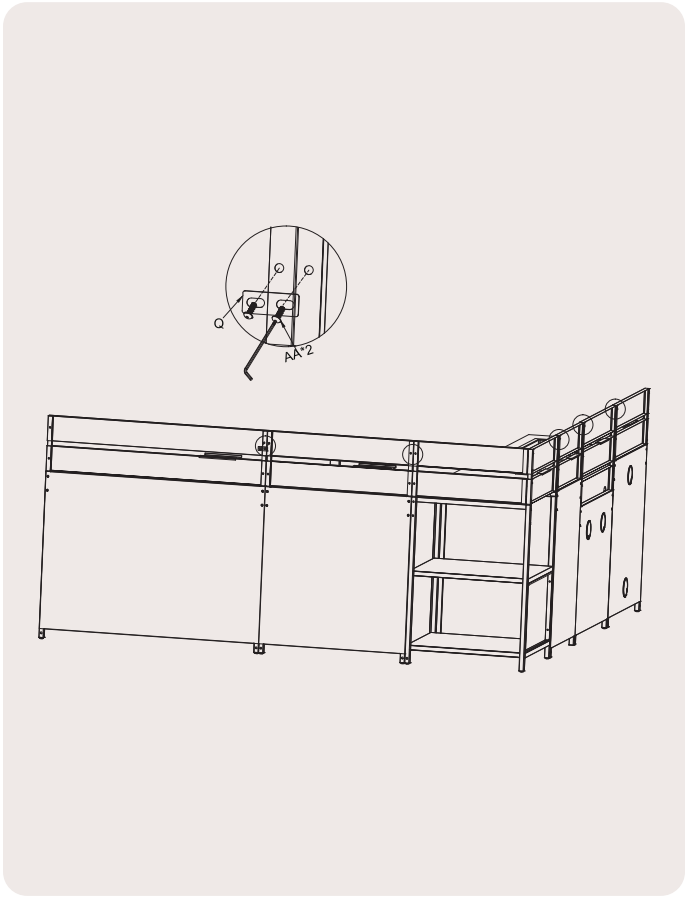

10 Join units at the top

PARTS Q AA x2


1. Stand the units side by side with the worktops level and the fronts in line.
2. At the top of the legs where the two units meet, fit a joining plate (Q) across both legs and fix it with 2 AA screws.

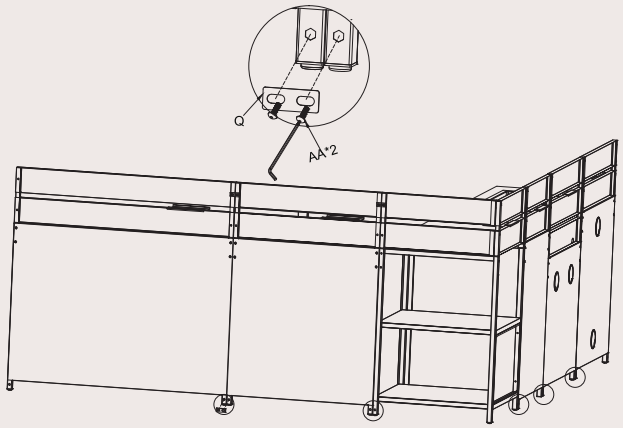

11 Join units at the feet

PARTS Q AA x2

1. Fit the second joining plate (Q) across the bottom of the same two legs, just above the feet, and fix it with 2 AA screws.
2. Check the units are still level, then tighten all the screws.

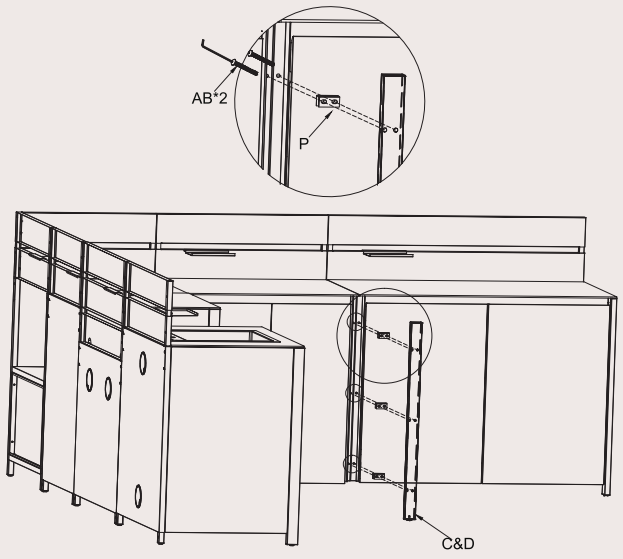

12 Join units at a corner

PARTS P AB x2

1. Where a unit meets the side of another unit in an L-shaped layout, fix the front leg (C or D) to the neighbouring unit with the joining brackets (P).
2. Use 2 AB screws for each bracket, as shown in the detail.

07 Care and maintenance

A few minutes of regular care keeps your outdoor kitchen looking good and working smoothly.

TASK	HOW OFTEN	WHAT TO DO
Wipe down	After use, or weekly in season	Wipe the worktop, doors and frame with warm water and a little washing-up liquid. Rinse and dry with a soft cloth.
Sintered stone worktop	After use	Wipe up spills, especially oil, wine and citrus, straight away. Use a chopping board, and put hot pans on a trivet or heat-resistant mat. Lift heavy items rather than sliding them.
Powder-coated frame	Monthly, and more often near the coast or a pool	Wash with warm soapy water, rinse and dry. Touch in any chips promptly so the steel underneath cannot rust.
Hinges and fixings	Every season	Check the hinge screws, the joining plates and all frame screws, and re-tighten any that are loose.
Inside the unit	Every season	Empty, wipe out and leave the doors open on a dry day to air.
Winter	Before the cold season	Clean and dry the unit, then fit a breathable cover. Do not wrap it tightly in plastic, which traps moisture.

PRODUCTS AND METHODS TO AVOID

- Bleach, chlorine, oven cleaner and acidic or abrasive cleaners.
- Steel wool, scouring pads and wire brushes, which leave particles that rust.
- Pressure washers, and hosing water into the cabinet or its joints.

ⓘ NOTE **Weather, sun and hot pans**

- Put hot pans, dishes and grill trays on a trivet or heat-resistant mat, never directly on the worktop.
- Sintered stone and other outdoor surfaces can change slightly in appearance over time with exposure to sun and weather. This is normal and does not affect performance.
- Your outdoor kitchen is made for outdoor use but is not watertight. Heavy or wind-driven rain can get in around doors, joints and appliance openings, so do not store anything inside that could be damaged by damp.
- In bad weather, keep doors and lids closed when the kitchen is not in use, and fit a cover once any barbecue has cooled. Do not leave food or loose items out.
- After strong winds or storms, check the kitchen for damage, loose parts and water inside before using it. If it has a gas barbecue, carry out a leak test first.

08 Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Door does not close flush, or catches	Unit not level, or hinge out of adjustment	Level the unit first. Then adjust the hinge screws with the screwdriver (AD).
Worktops of neighbouring units do not line up	Units at different heights	Adjust the feet so the worktops are level with each other, then re-tighten the joining plates.
Unit rocks	Feet not adjusted, or uneven ground	Adjust the feet until all four touch the ground firmly.
Screw holes do not line up	Screws tightened too early	Loosen the screws in that step, line the parts up, then tighten them again.
Marks on the worktop	Oil, wine or acidic food left to dry	Clean with warm soapy water, or a cleaner made for sintered stone. Wipe spills up straight away.
Rust spots on the frame	Chipped powder coating, or salt and chlorine near the coast or a pool	Clean, dry and touch in the chip. Rinse the frame more often near the coast or a pool.

Still having problems? Contact our customer services team on 0330 808 1744 or at customerservices@harbourlifestyle.co.uk. Please have your order number and the batch number from page 15 ready.

09 Disposal and recycling

PACKAGING

- Cardboard: flatten and recycle with household recycling.
- Plastic film and bags: recycle at carrier-bag points where accepted.
- Polystyrene and foam: take to your local household waste recycling centre.
- Keep plastic bags away from children - risk of suffocation.

THE PRODUCT

- Steel frame and panels: scrap metal recycling at your household waste recycling centre.
- Sintered stone worktop: inert, take it to the rubble or hardcore area at your recycling centre.
- Plastic feet and fittings: household waste recycling centre.

10 Compliance information

ITEM	DETAIL
Product	Vesta Outdoor Kitchen Low BBQ Cabinet Unit
SKU	VST-2DR-80-BBQ-DBP-GR (Grey); VST-2DR-80-BBQ-DBP-LAT (Latte)
Batch number	_____ (see the label on the product and packaging)
UK importer and responsible person	Harbour Outdoor Living Limited, trading as Harbour Lifestyle, Hope Hall Stud, The Foaling Yard, Dullingham, CB8 9UW, United Kingdom. Company no. 12934430. customerservices@harbourlifestyle.co.uk, 0330 808 1744
Guarantee	The guarantee period for your product is shown on your order confirmation email. Your statutory rights are not affected. To make a claim, contact customerservices@harbourlifestyle.co.uk with your order number and the batch number.
Markings	Supplied under the General Product Safety Regulations 2005 (GB).

FOR YOUR RECORDS

Date of purchase	Order number	Batch number	Installed by

HARBOUR
LIFESTYLE

Customer services

customerservices@harbourlifestyle.co.uk

0330 808 1744 (Monday to Friday, 10am - 4pm)

WWW.HARBOURLIFESTYLE.CO.UK