


HARBOUR

LIFESTYLE

Instruction Manual for PergoSTET Plus 3m x 3m Wall Mounted Pergola

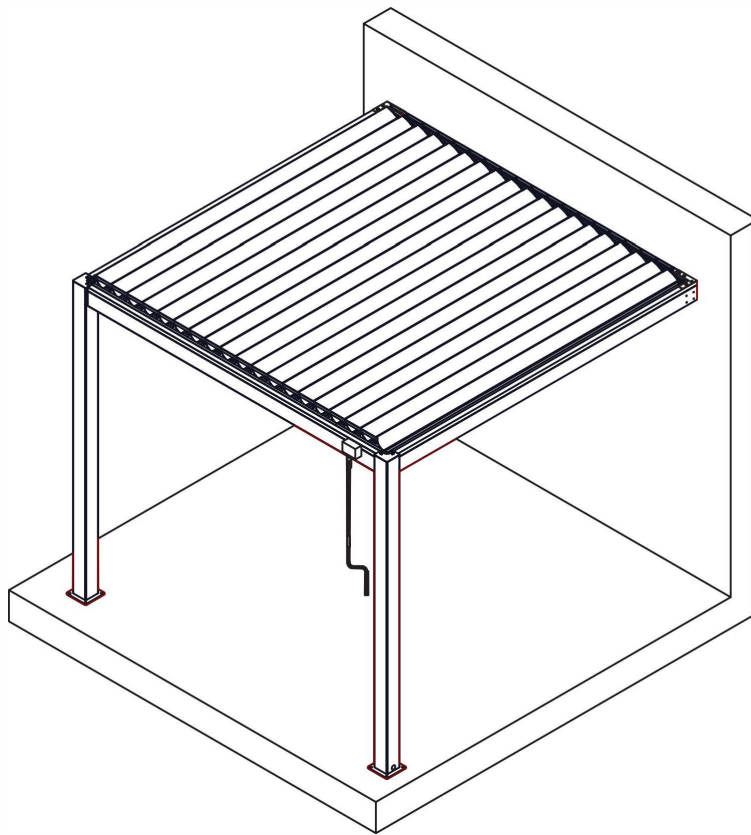

www.harbourlifestyle.co.uk

If you have any questions or require additional support, please contact the team at customerservices@harbourlifestyle.co.uk. Alternatively you can contact us via telephone on 0330 808 1744.



Installation and Wind Management Guidelines

1.Installation on Various Surfaces

For WPC (Wood Plastic Composite), antiseptic wood, ceramic, or stone flooring, it is essential to either concrete the post directly or construct a 50cm concrete foundation beneath the base plate to secure it firmly.








2.Wind Management



In the event of strong winds, the louvers must be opened to maintain proper air circulation and minimise wind resistance.”






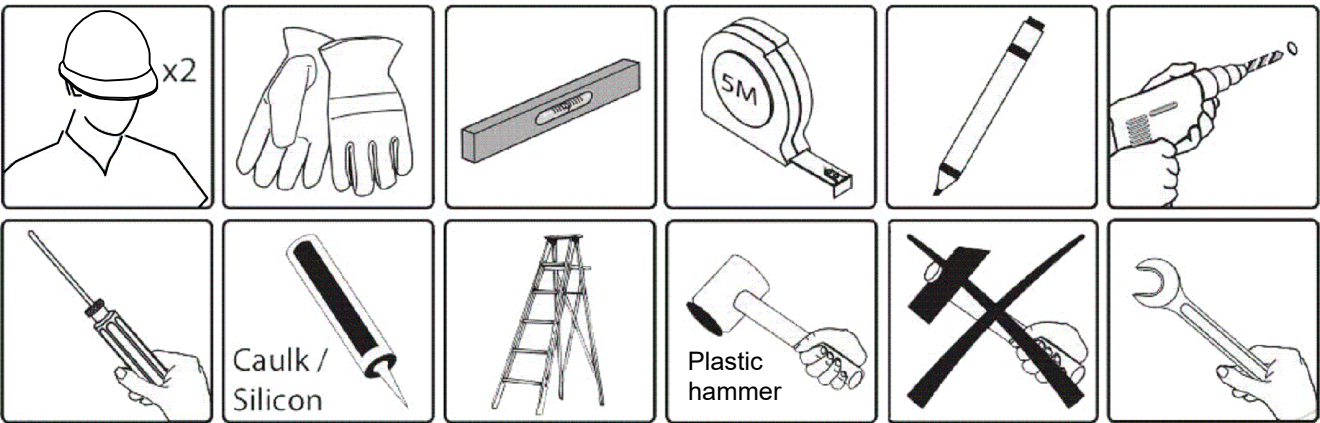
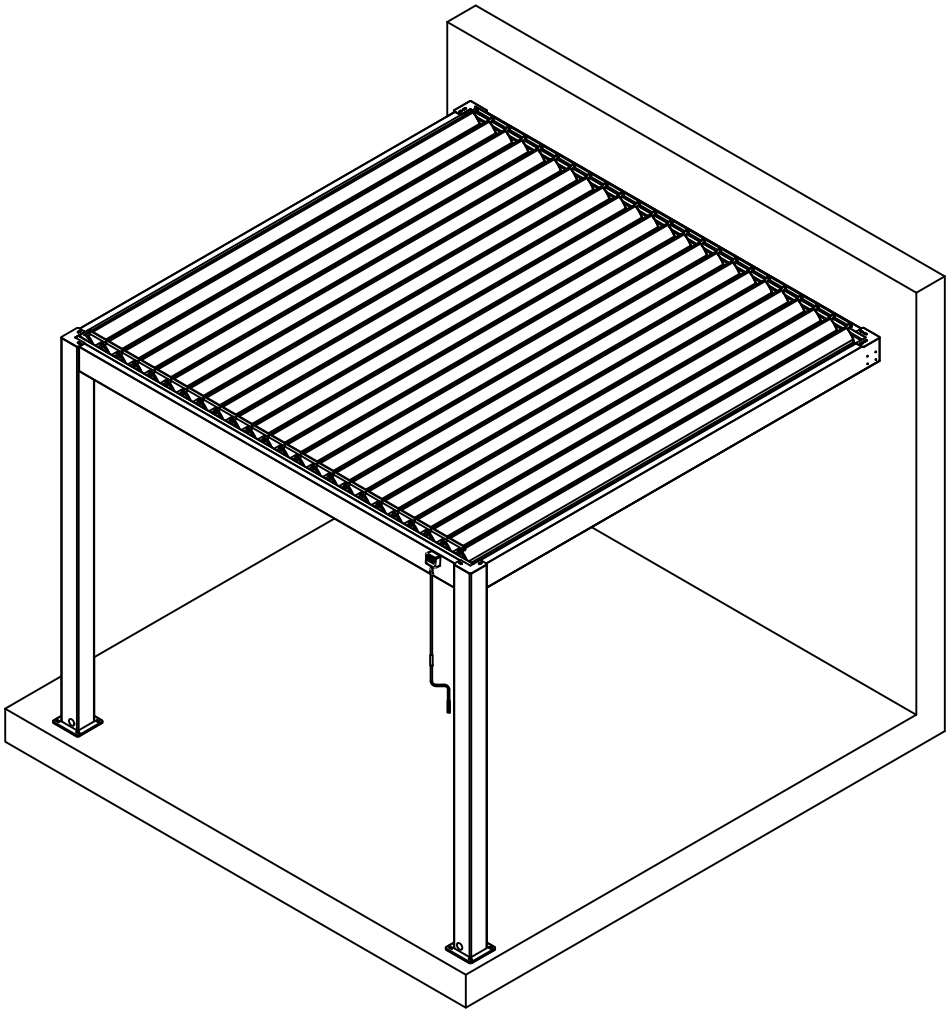







3×3m

	Item	Qty		Item	Qty		Item	Qty
Carton 1/4	1B-01	2		1B-11	2		1B-12	2
	1B-13	2		1B-14	1		1B-15	1
	1B-18	1		1B-19	12		1B-20	48+
	1B-21	8+		1B-22	12+		1B-23	20+
	1B-24	1		1B-35	2		1B-36	8
	1B-16	1		1B-39	9+		1B-40	2
	1B-42	8		1B-43	1		1B-55	2+
	1B-67	10+						
Carton 2/4	1B-02	1		1B-03	1		1B-04A/B	2
	1B-05A/ B/C/D	4		1B-08A/B	2		1B-09	2
	1B-29	2						
Carton 3/4	1B-06	1		1B-07	11			
Carton 4/4	1B-07	12						

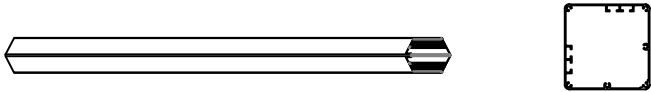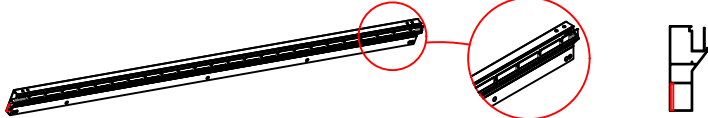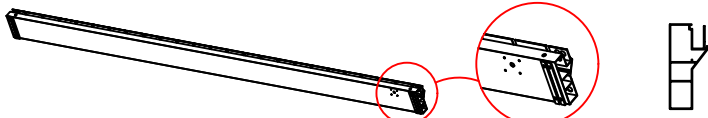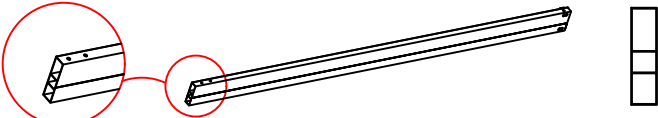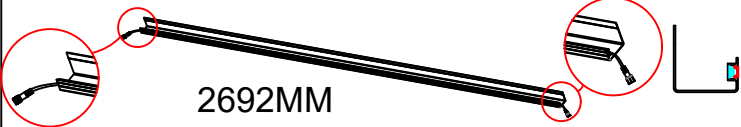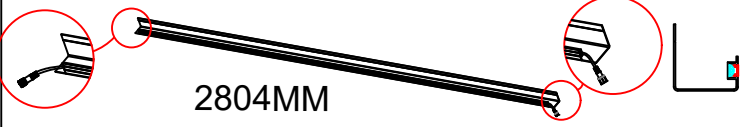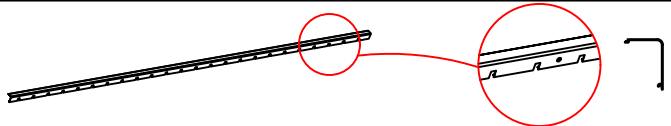
Item	Name	Drawings	Qty
1B-01	Posts		2
1B-02	Wall Rail		1
1B-03	Beam		1
1B-04A	Beams		1
1B-04B	Beams		1
1B-05A	Gutter		1
1B-05B	Gutter		1
1B-05C	Gutter		1
1B-05D	Gutter		1
1B-06	Driving Louvre		1
1B-07	Common Louvres		23
1B-08A	Louvre Linkage Bar Cap		1
1B-08B	Louvre Linkage Bar Cap		1

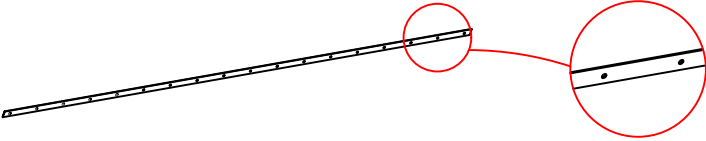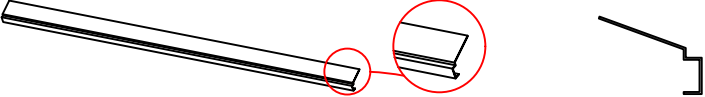Item	Name	Drawings	Qty
1B-09	Louvre Linkage Bar		2
1B-29	Water blocker		2

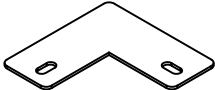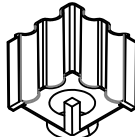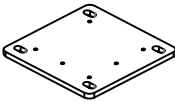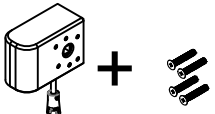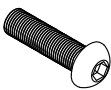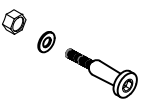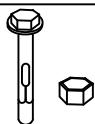Item	Drawings	Qty
1B-11		2
1B-12		2
1B-13		2
1B-14		1
1B-15		1
1B-16		1
1B-18		1
1B-19	 M8*20	12
1B-20		48+
1B-21	 M10*80	8+
1B-22	 M5.5*50	12+
1B-23	 M4.2*19	20+

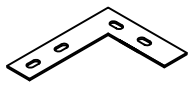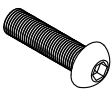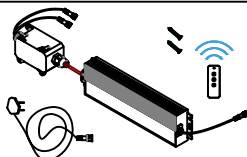Item	Drawings	Qty
1B-24		1
1B-35		2
1B-36		8
1B-40		2
1B-42	 M10*20	8
1B-43		1
1B-39	 M8*60	9+
1B-55		2
1B-67	 M4.2*60	10+


3×3m

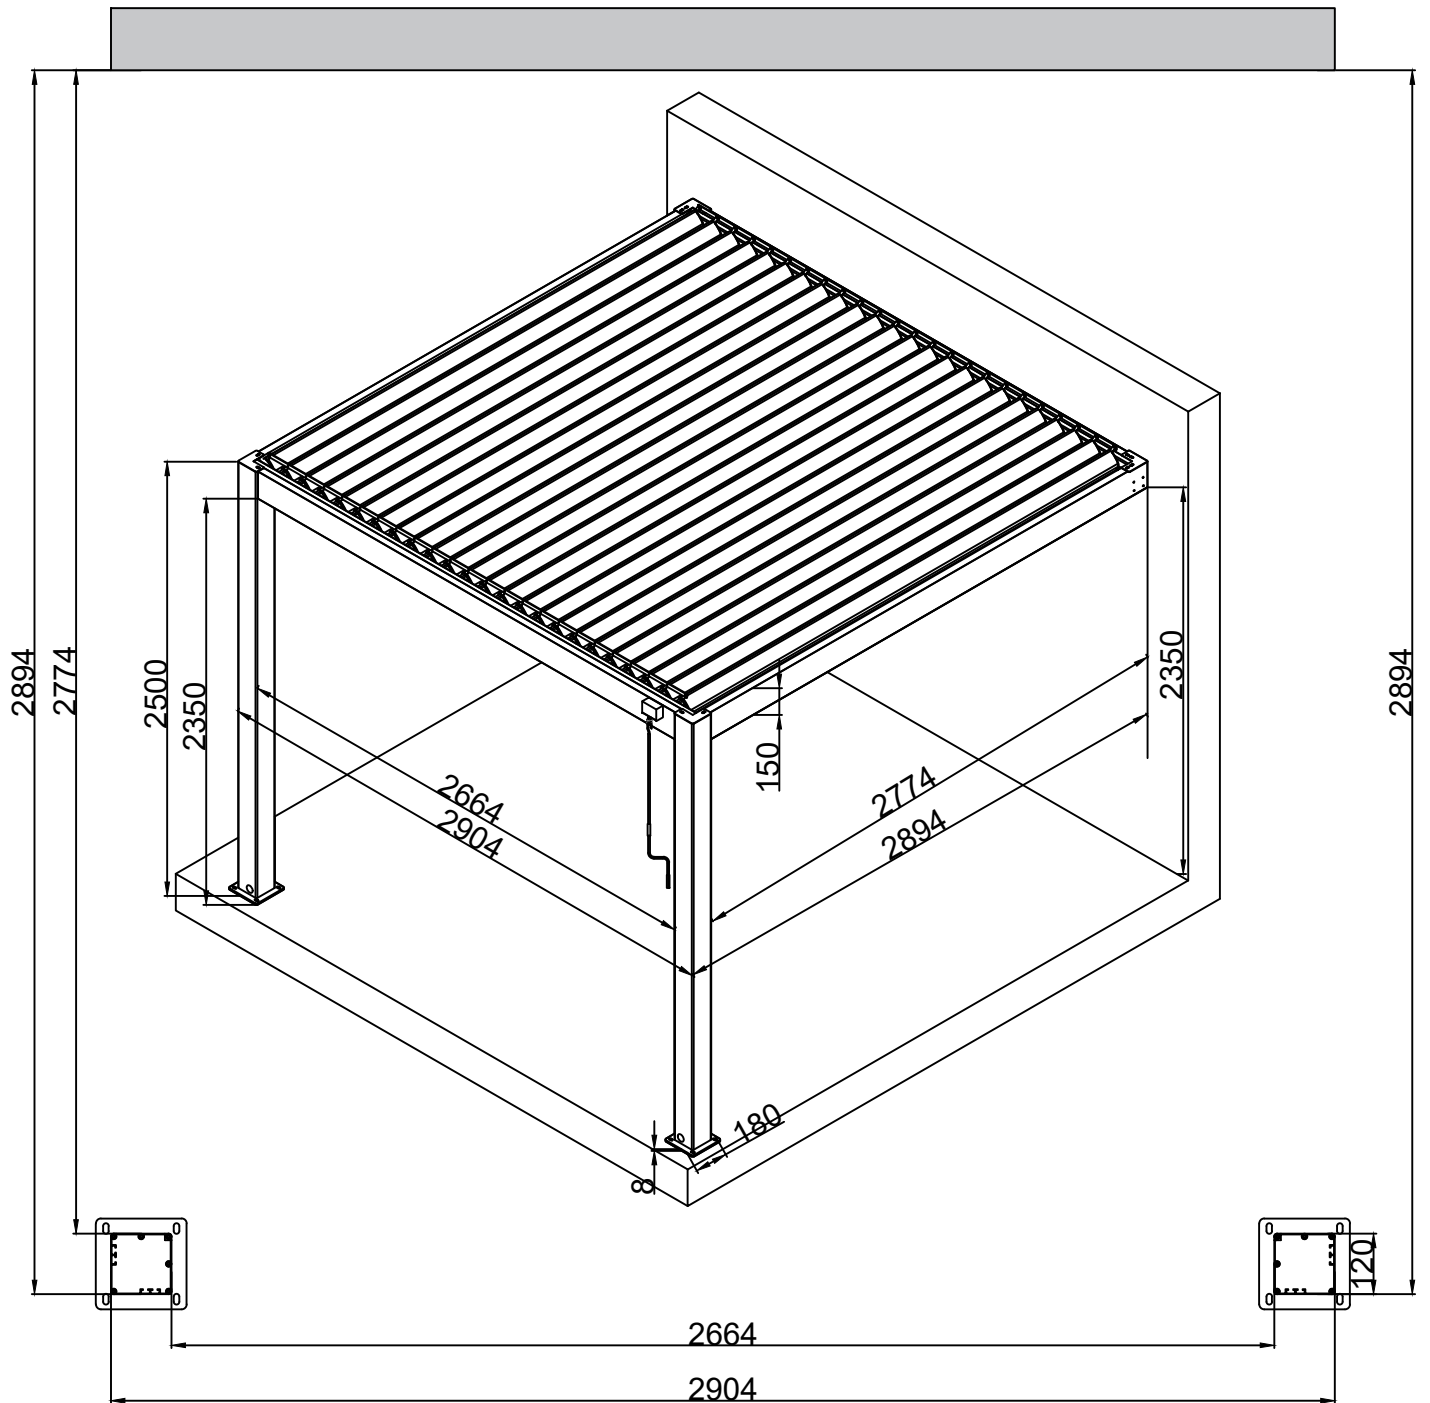

3×3-5



3×3m

Before installing the bottom expansion screws, please
be sure to correct the frame size.



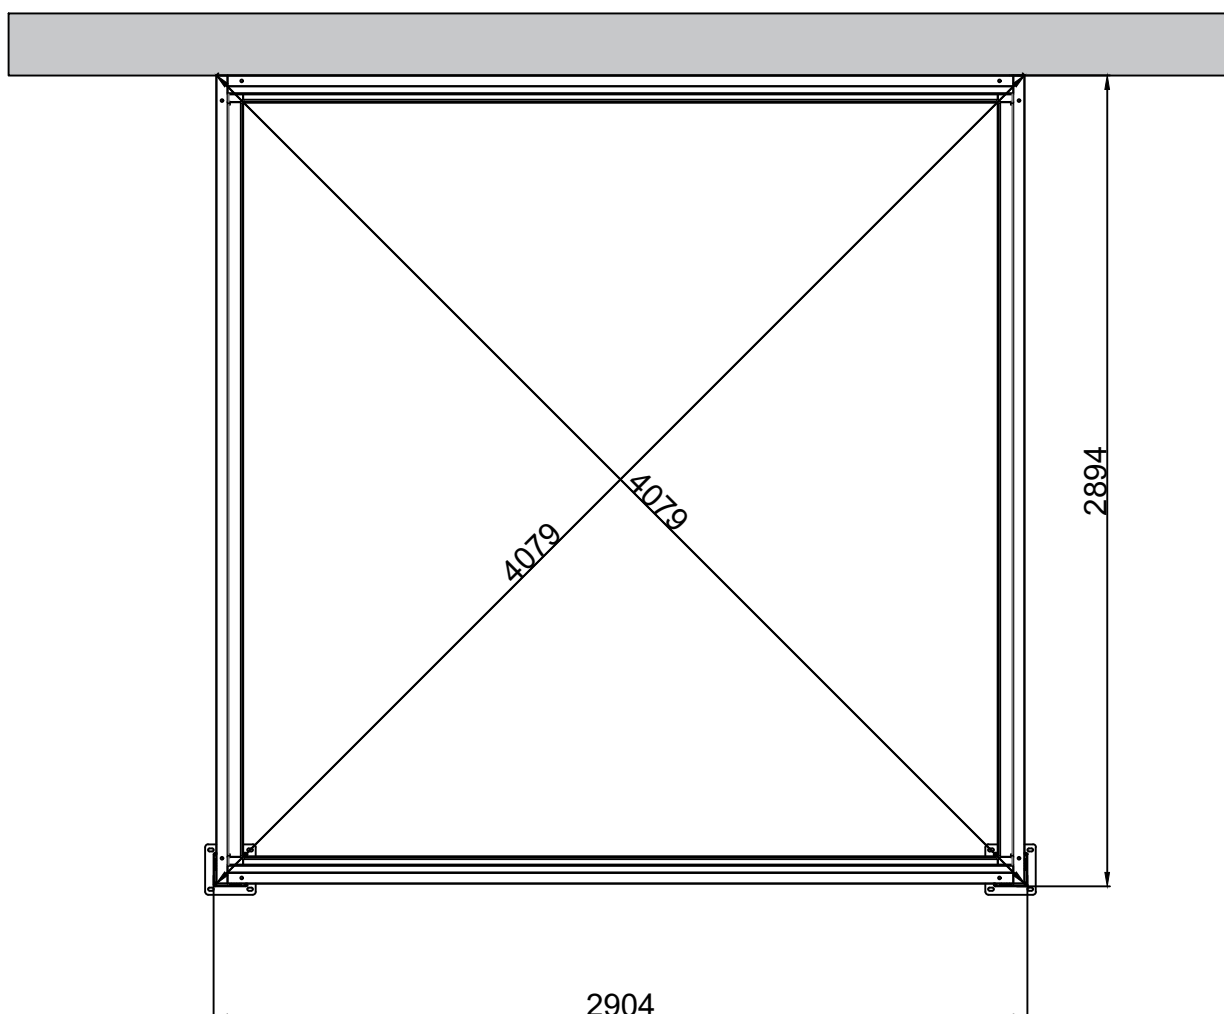


3×3-6


step 1

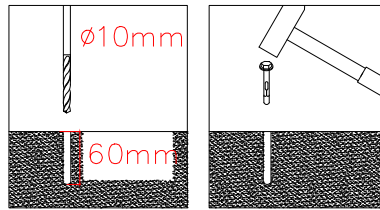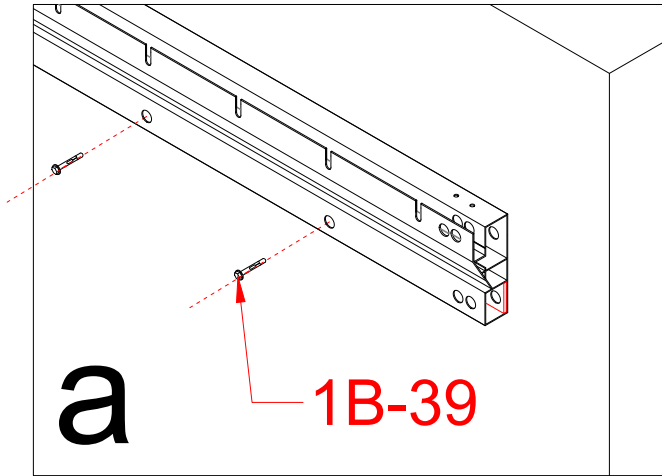

Place the reinforcing plate properly in the main beam against the wall, align it with the screw holes, and then install the bolts.

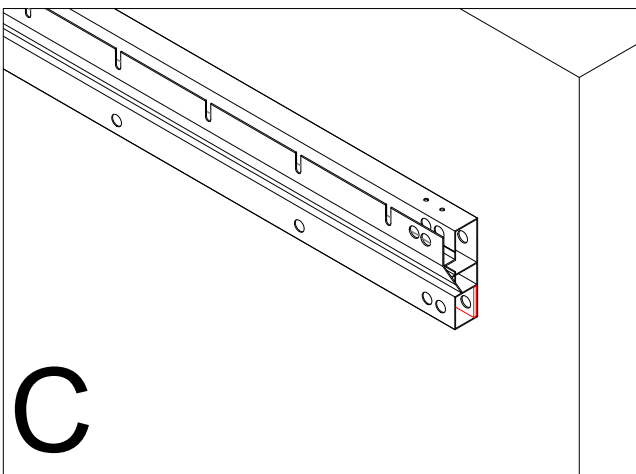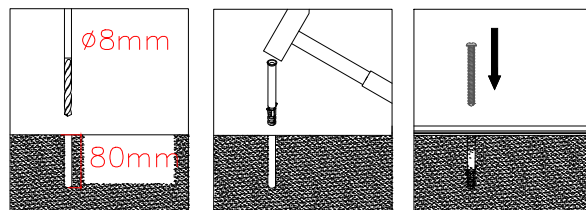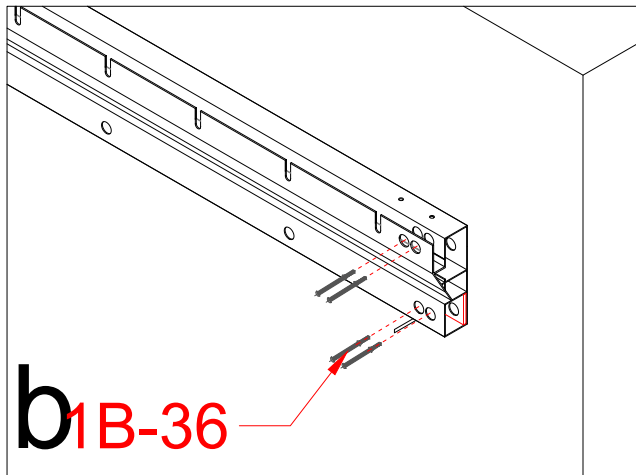




Apply silicone behind the beam

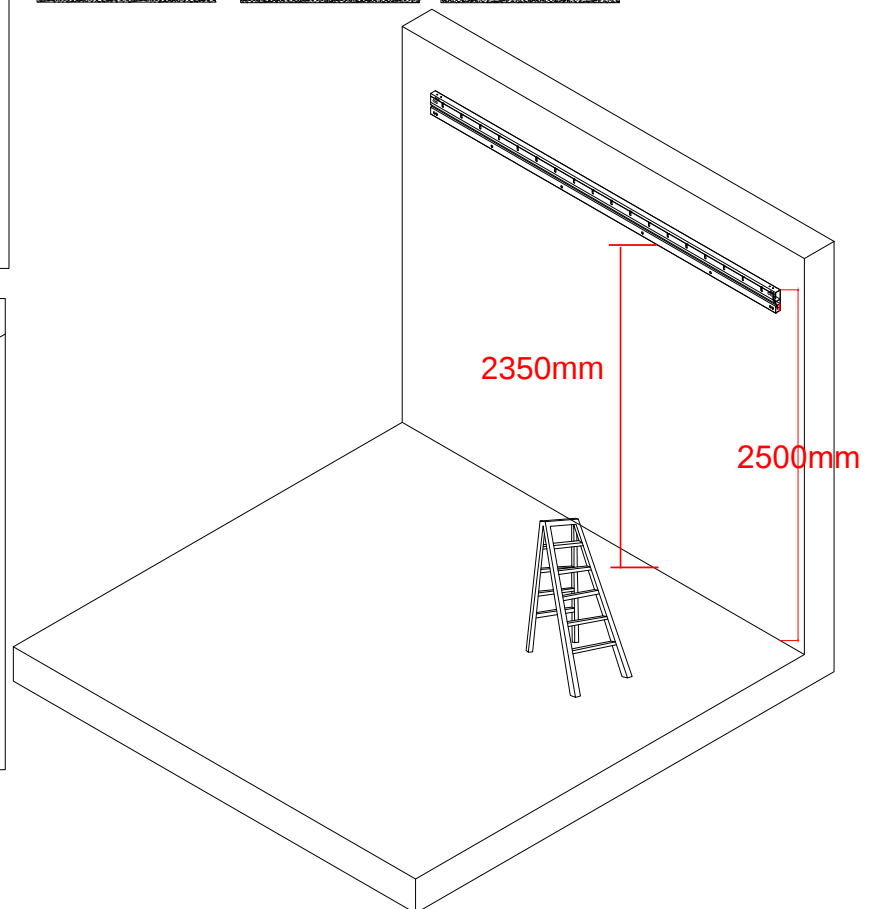


1B-36		8
1B-39		3




step 2

Please remove all packaging from parts before installing

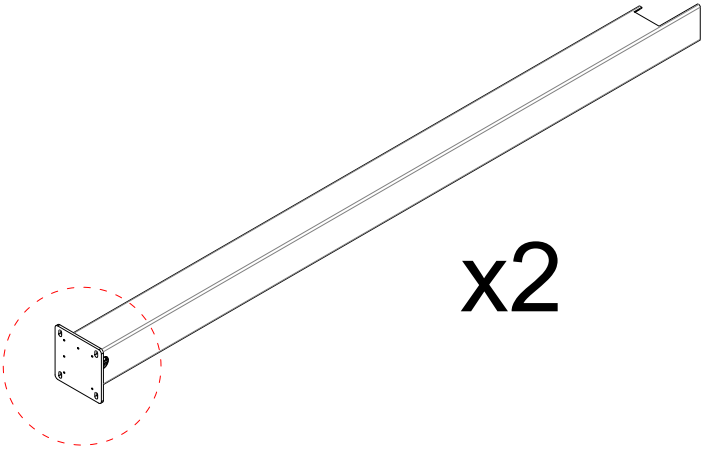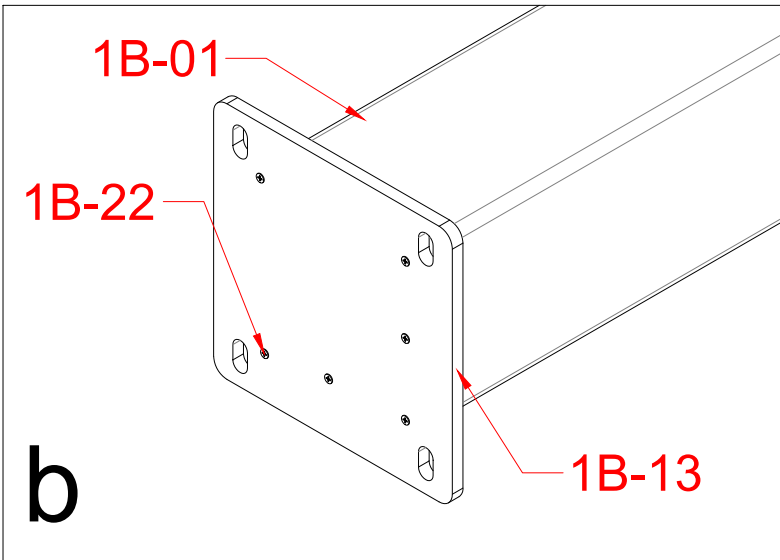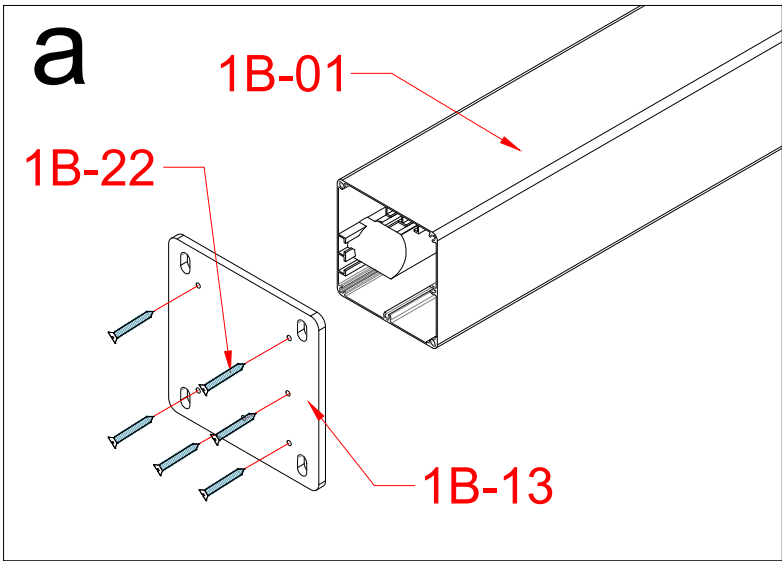


1B-01	 	2
1B-13		2
1B-22		12

step 3



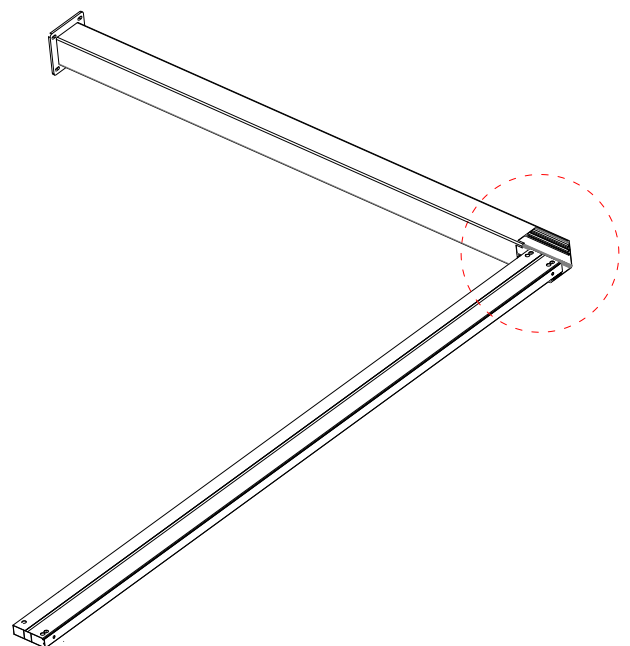
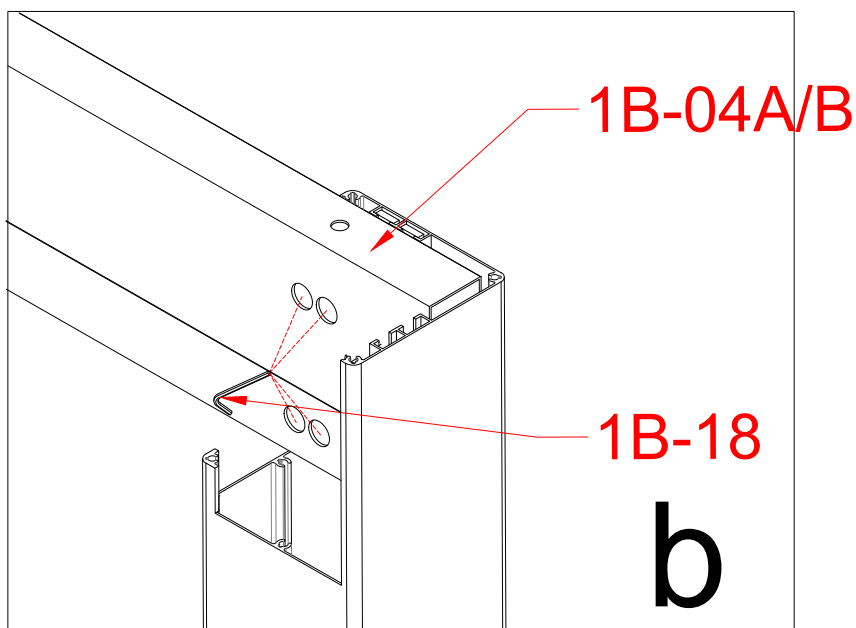
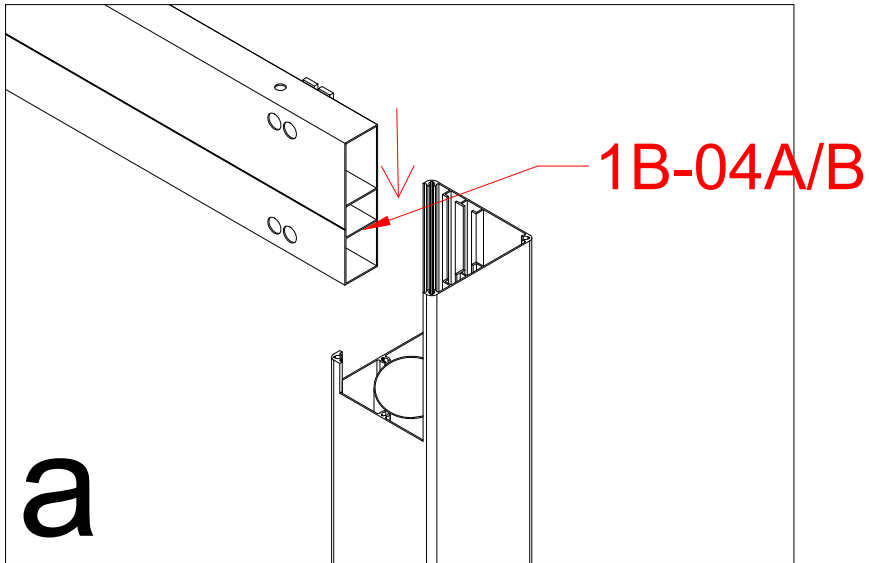



1B-18		2
1B-01		2
1B-04		2

step 4



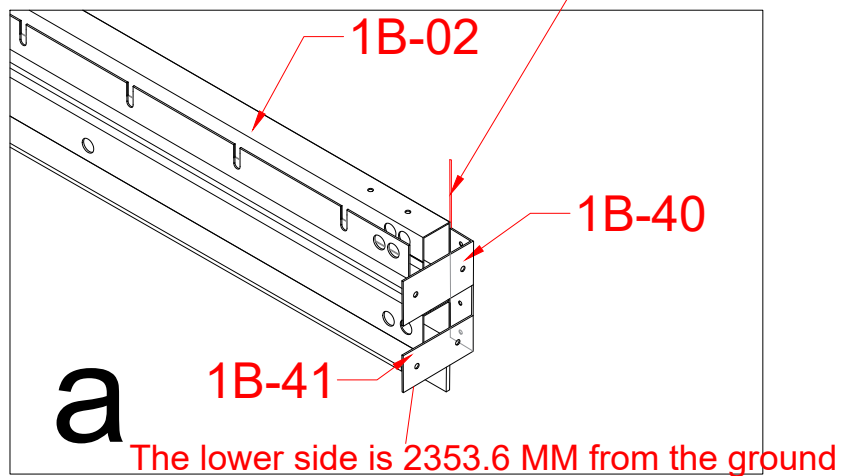


1B-40 The distance is 3.5mm from the main frame

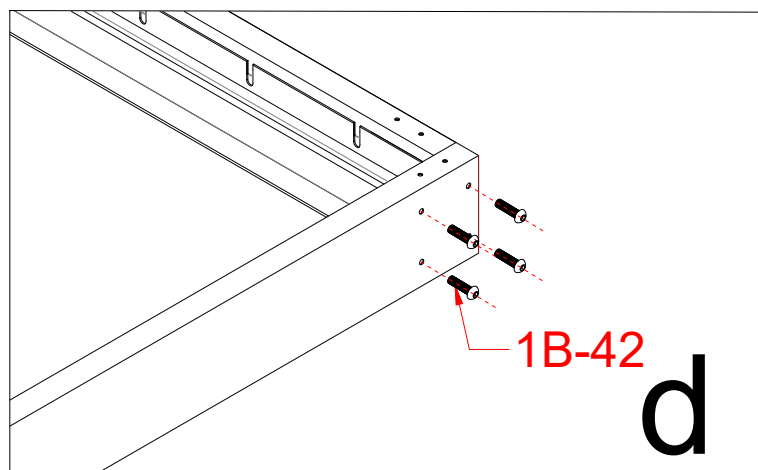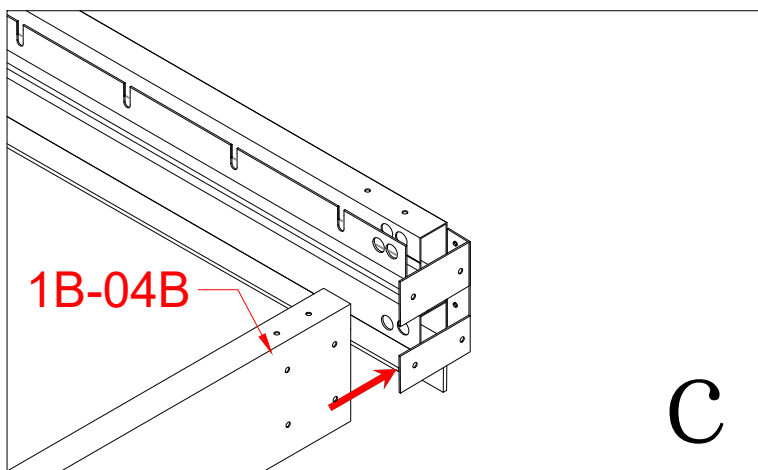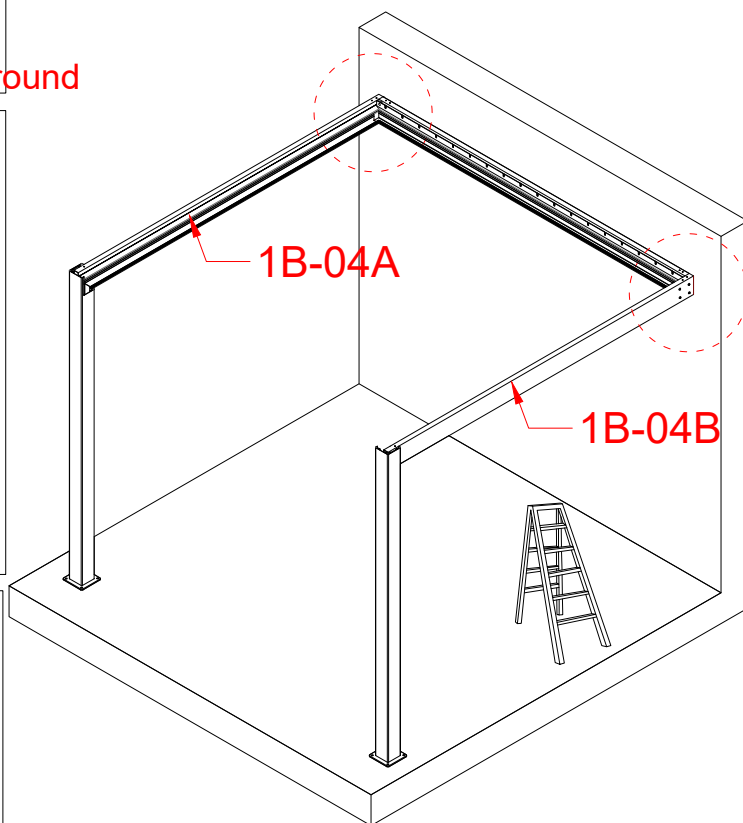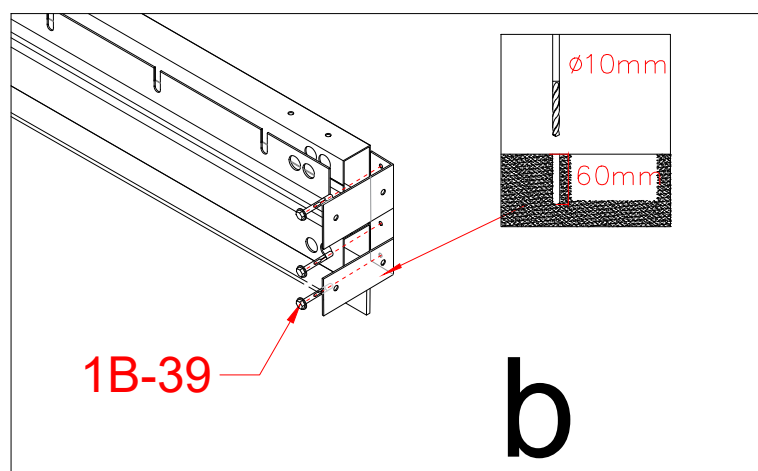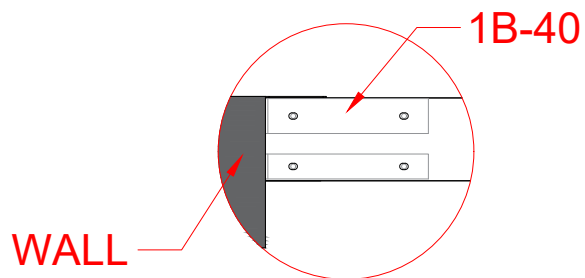


1B-42	 M10*20	8
1B-40		2
1B-04A/ B		2
1B-39		6

step 5

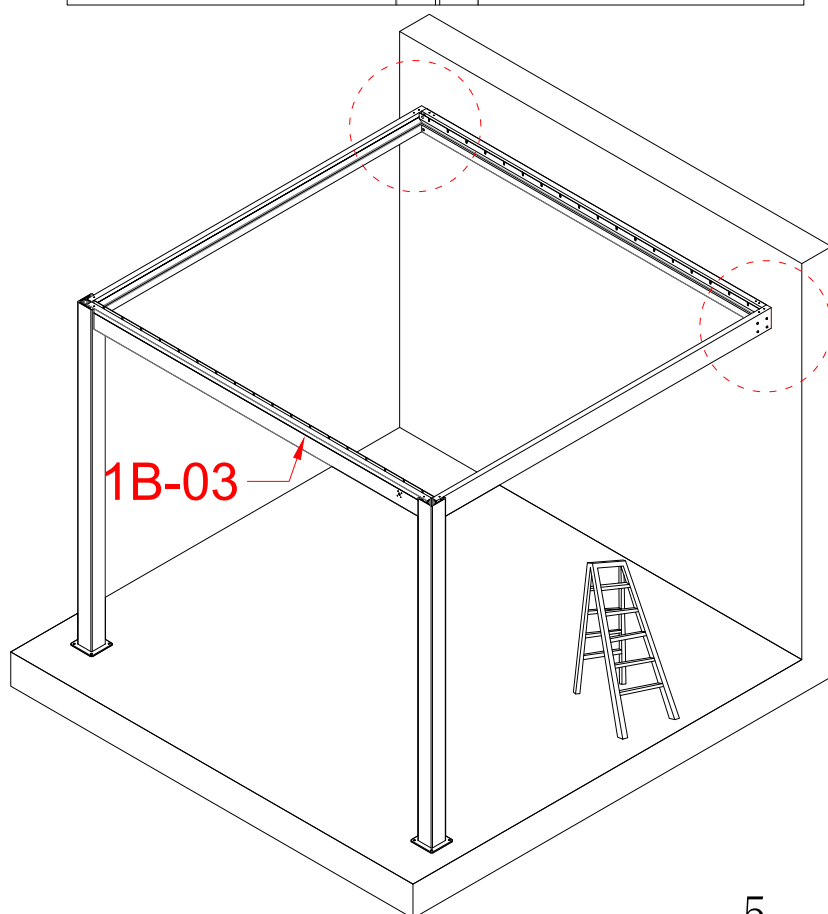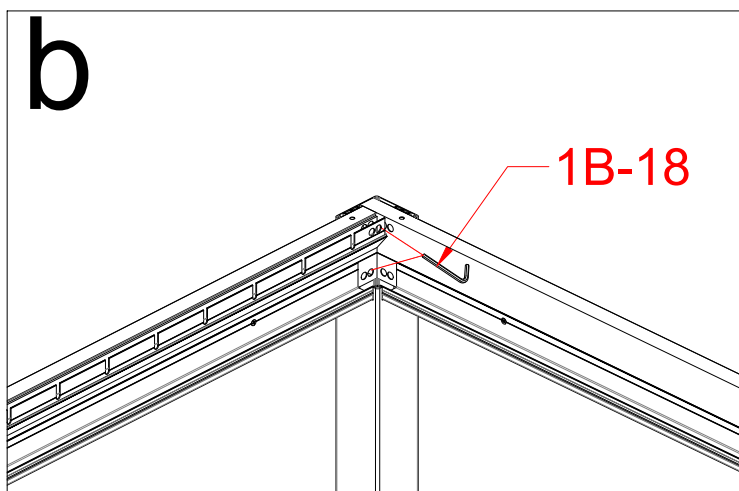
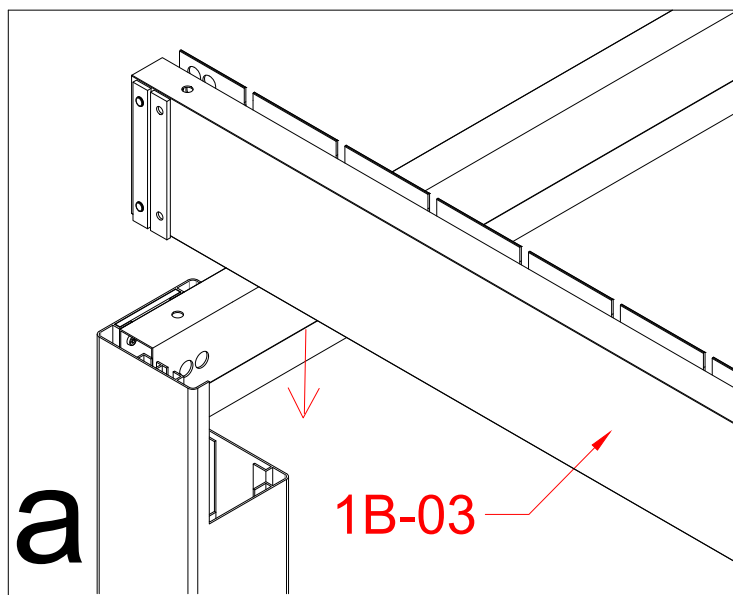




1B-03		1
-------	--	---

step 6

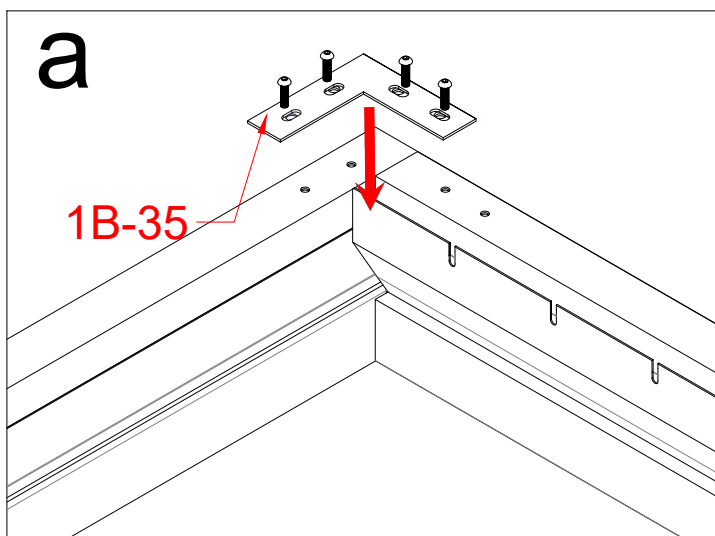





Apply silicone under part 1B-11

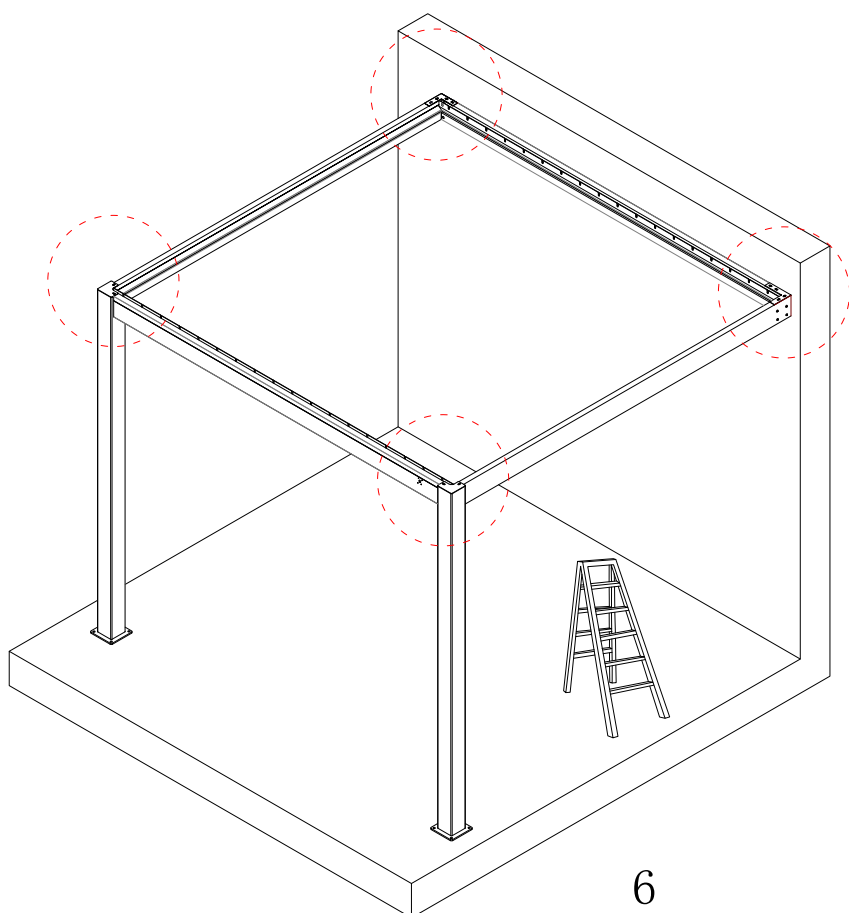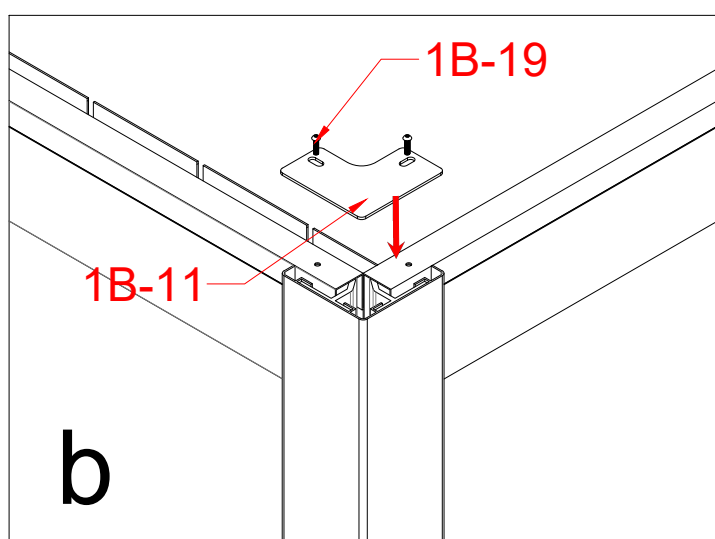


1B-35		2
1B-11		2
1B-19		12

step 7

Warning: Before installation, tear off the protective film of the tape on the back side of Gutter.

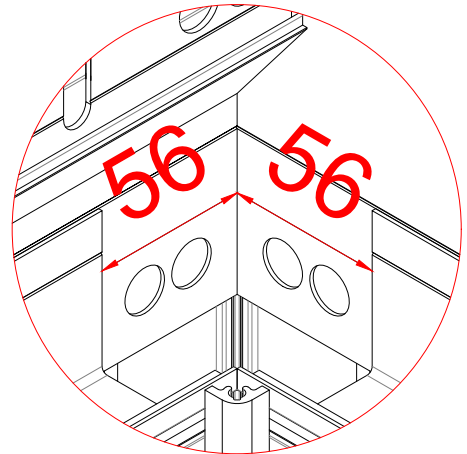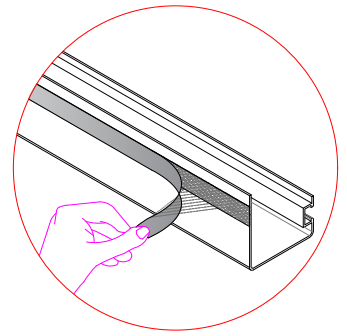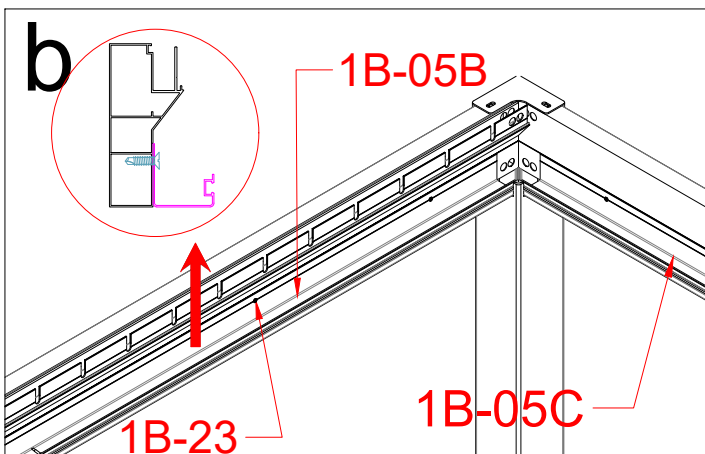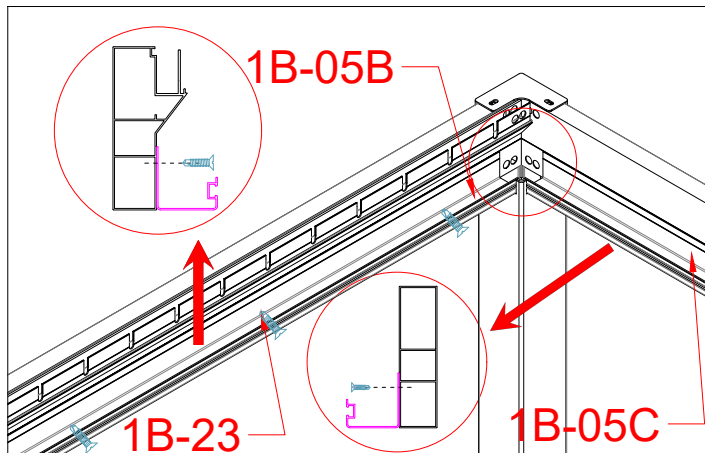



Use screws (1B-23) to mount the gutter on beam.

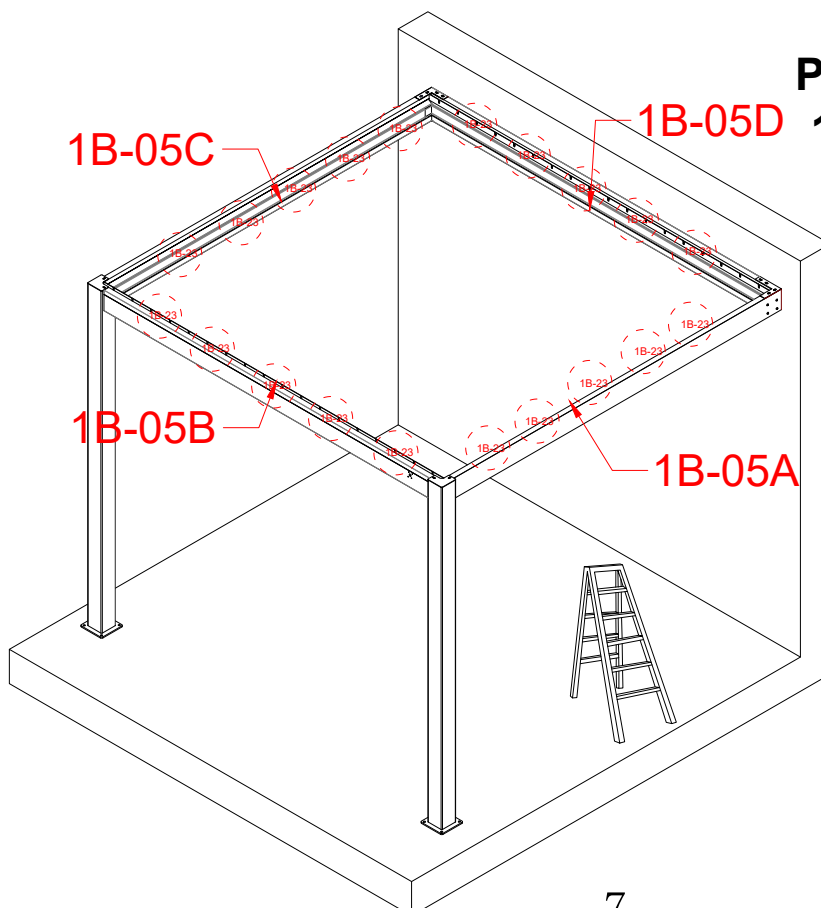


Please note that 1B-05D is longer.

1B-05A		1
1B-05B		1
1B-05C		1
1B-05D		1
1B-23		X





step 8

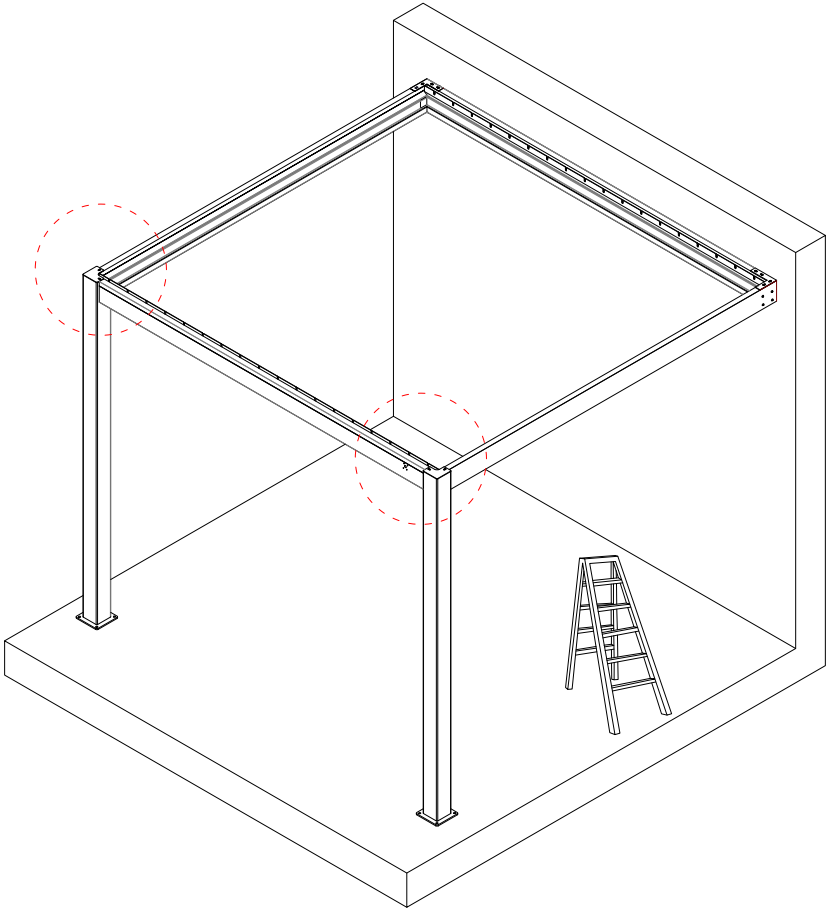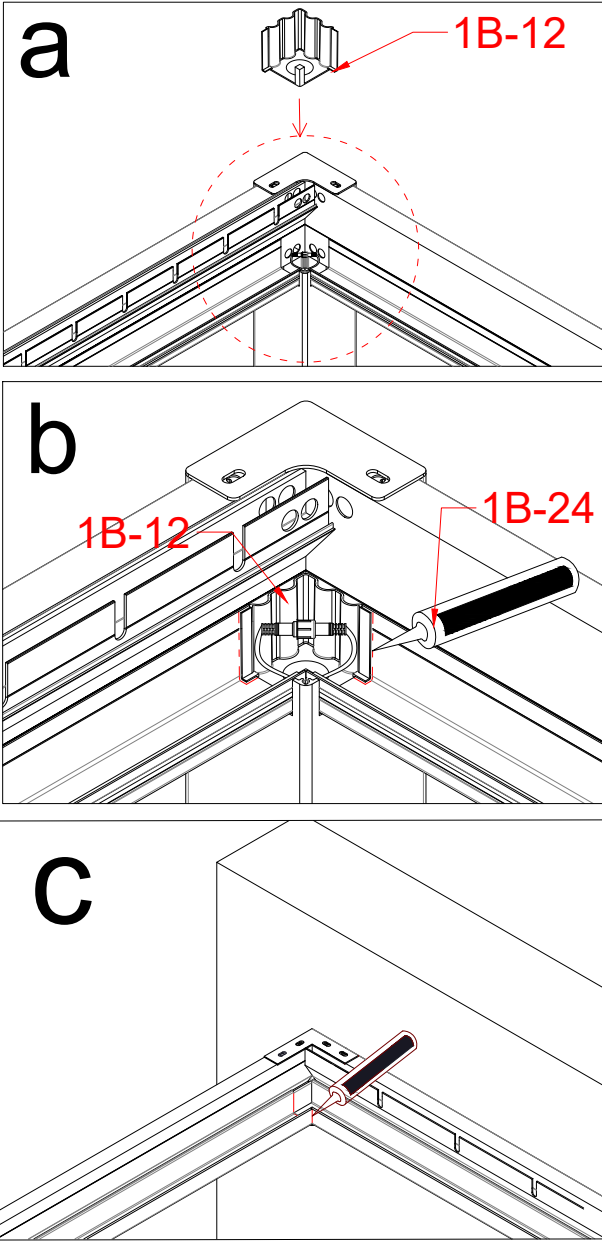

1B-24		1
1B-12		2





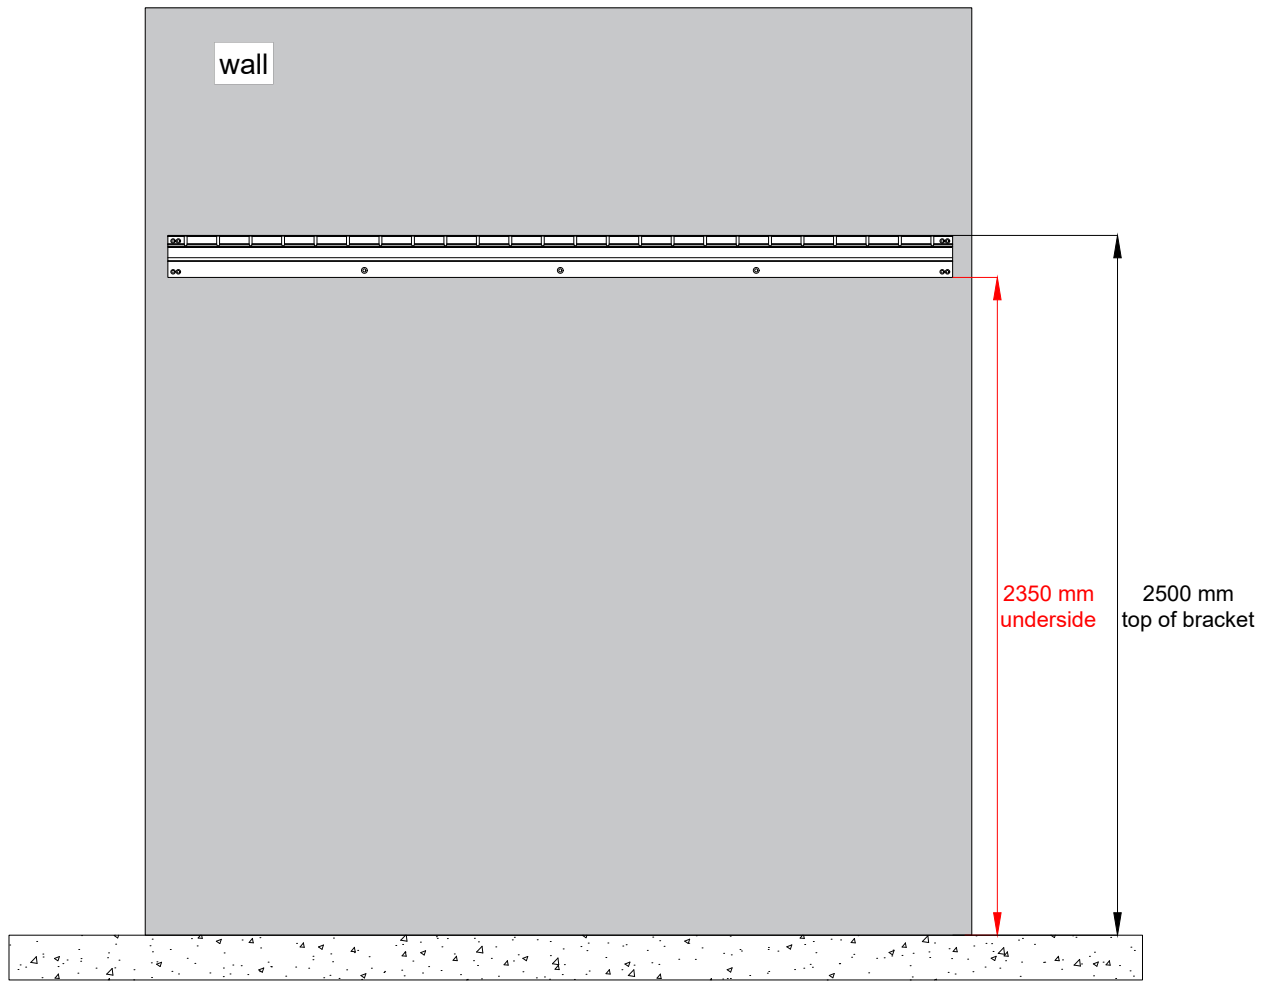


step 9

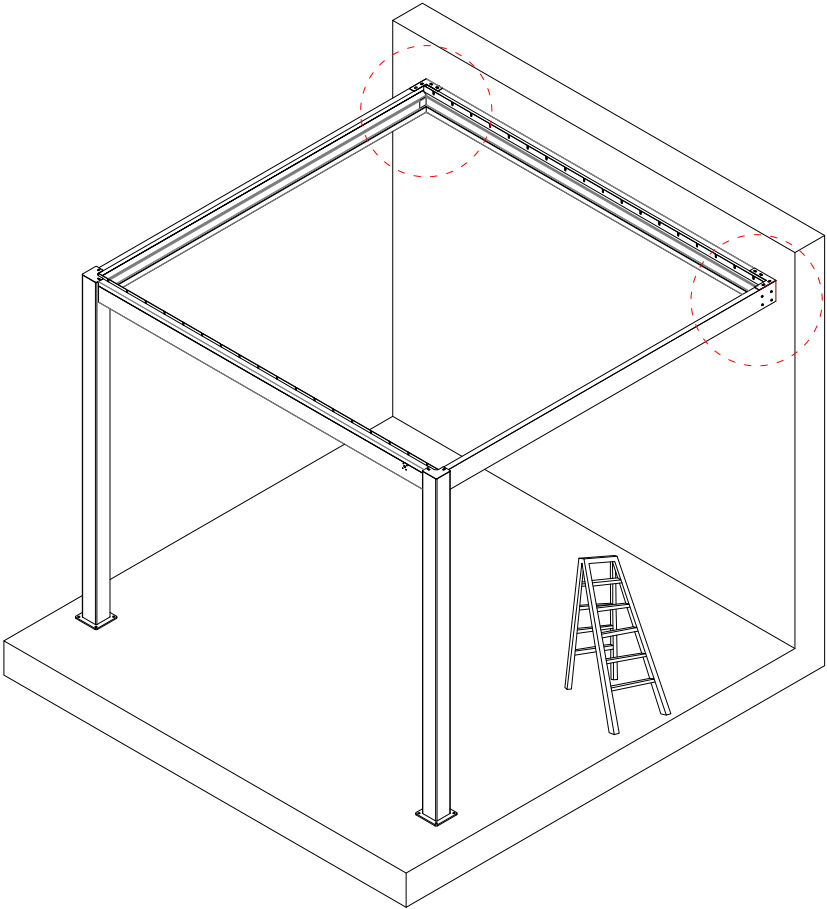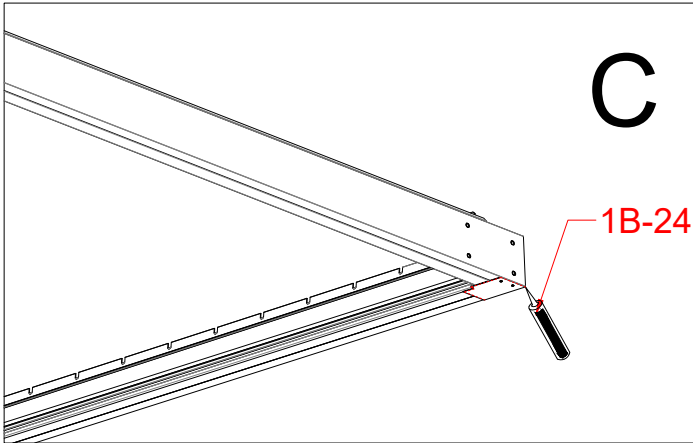
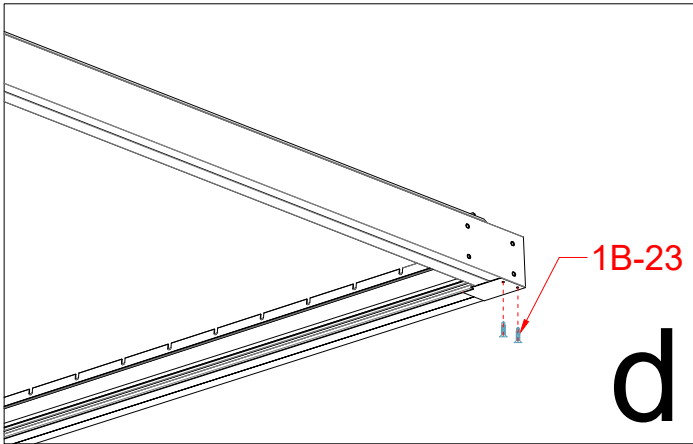
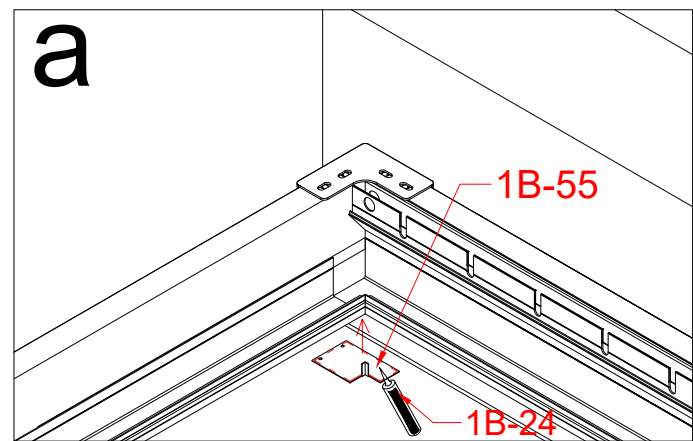


1B-24		1
3B-55		2
3B-23		4

step 10

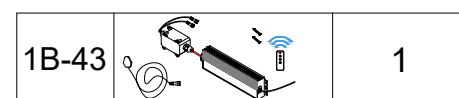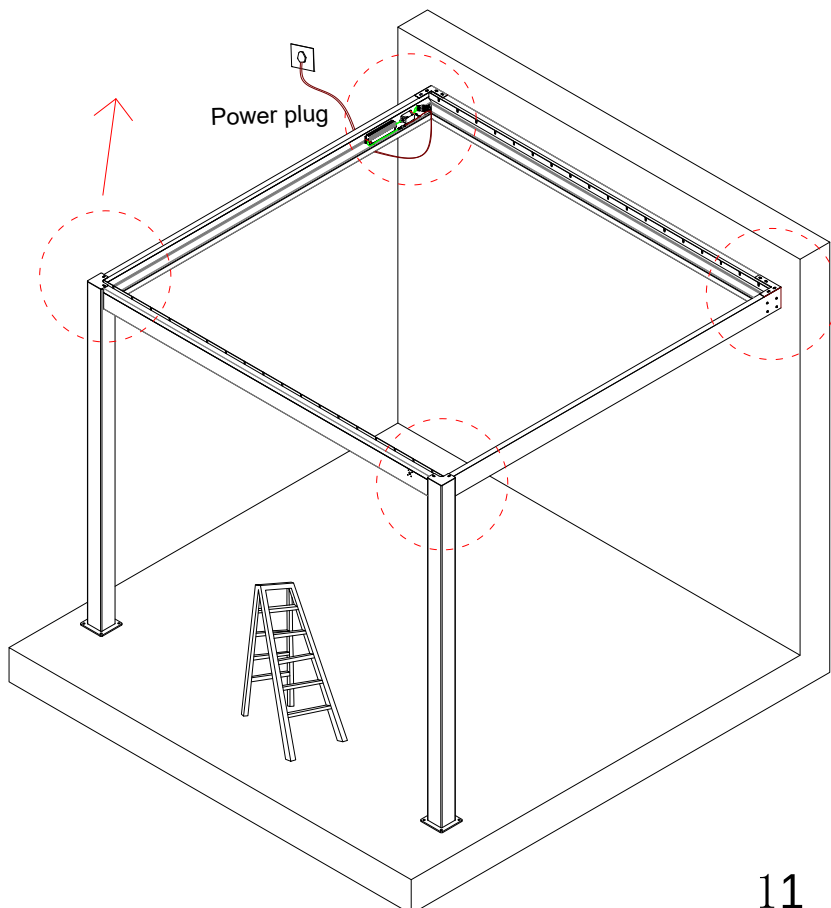
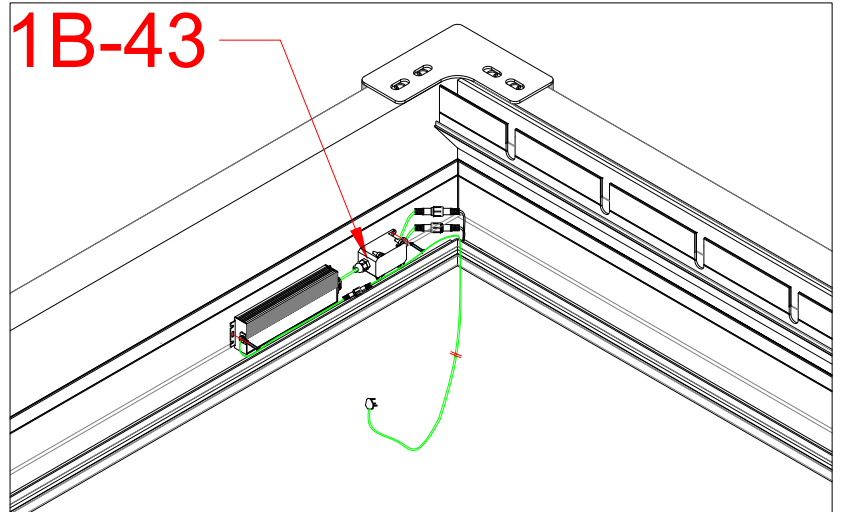
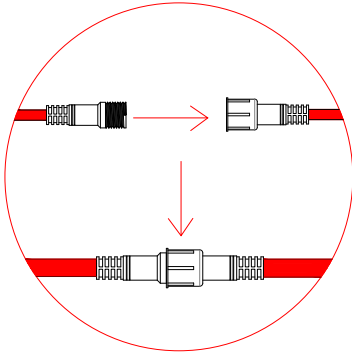
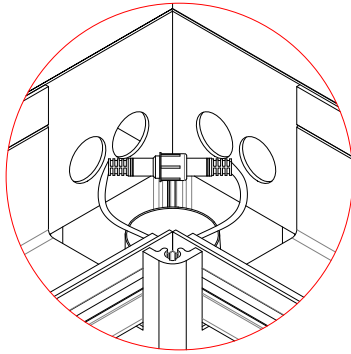


step 11

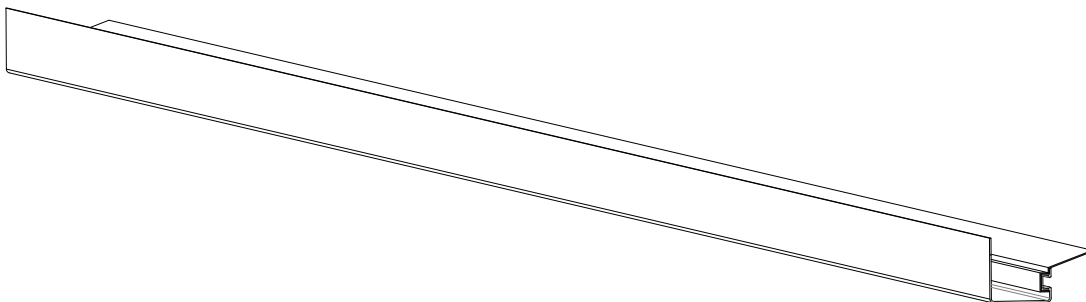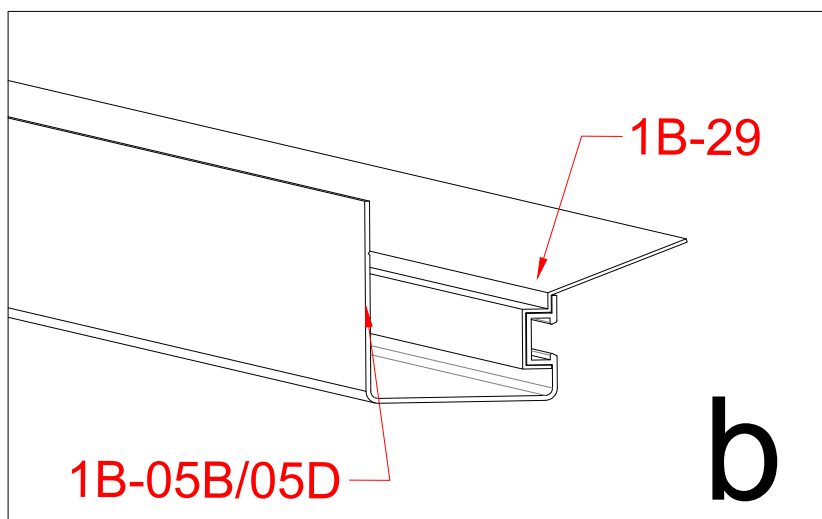
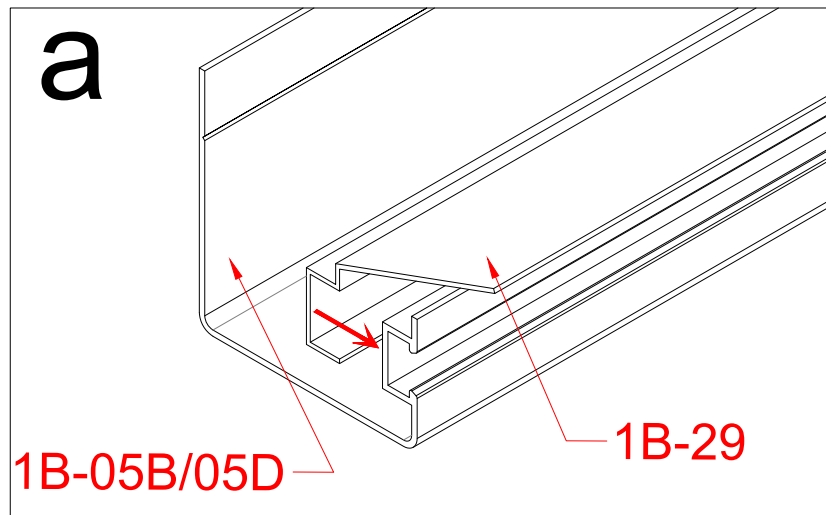


1B-05B/D		2
1B-29		2

step 12

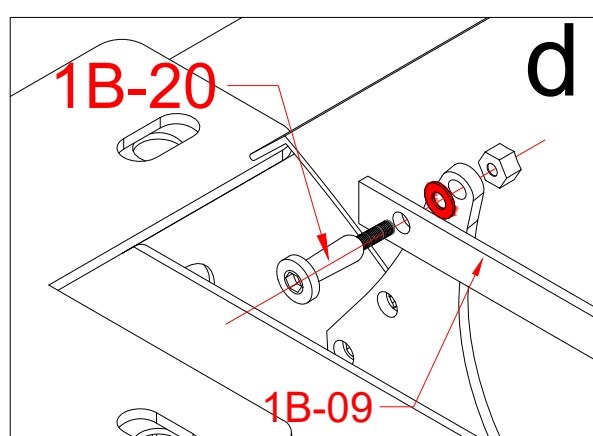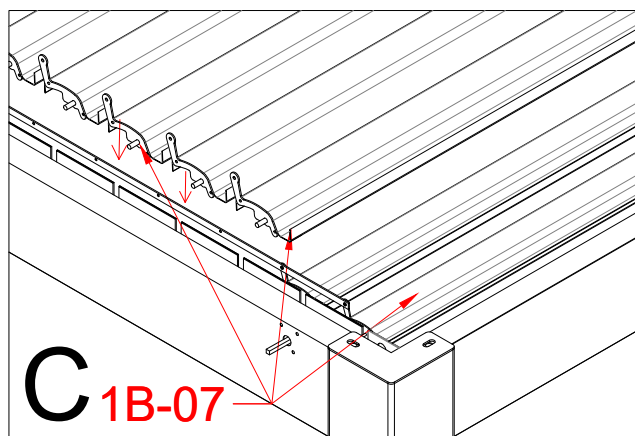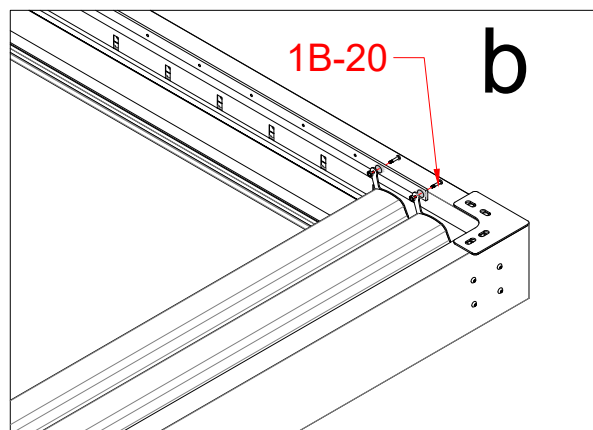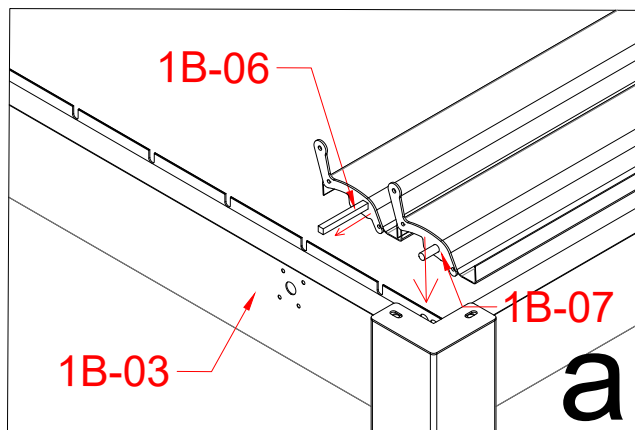





Pls do not tighten 1B-20 to the end circle, if it's tightened to the end, pls loosen one circle back. Otherwise the louver cannot be closed completely.

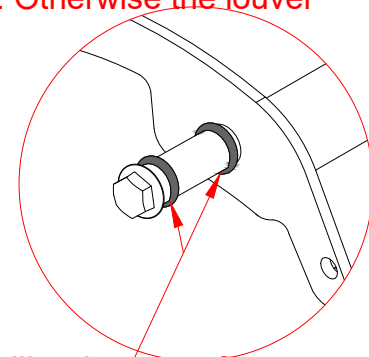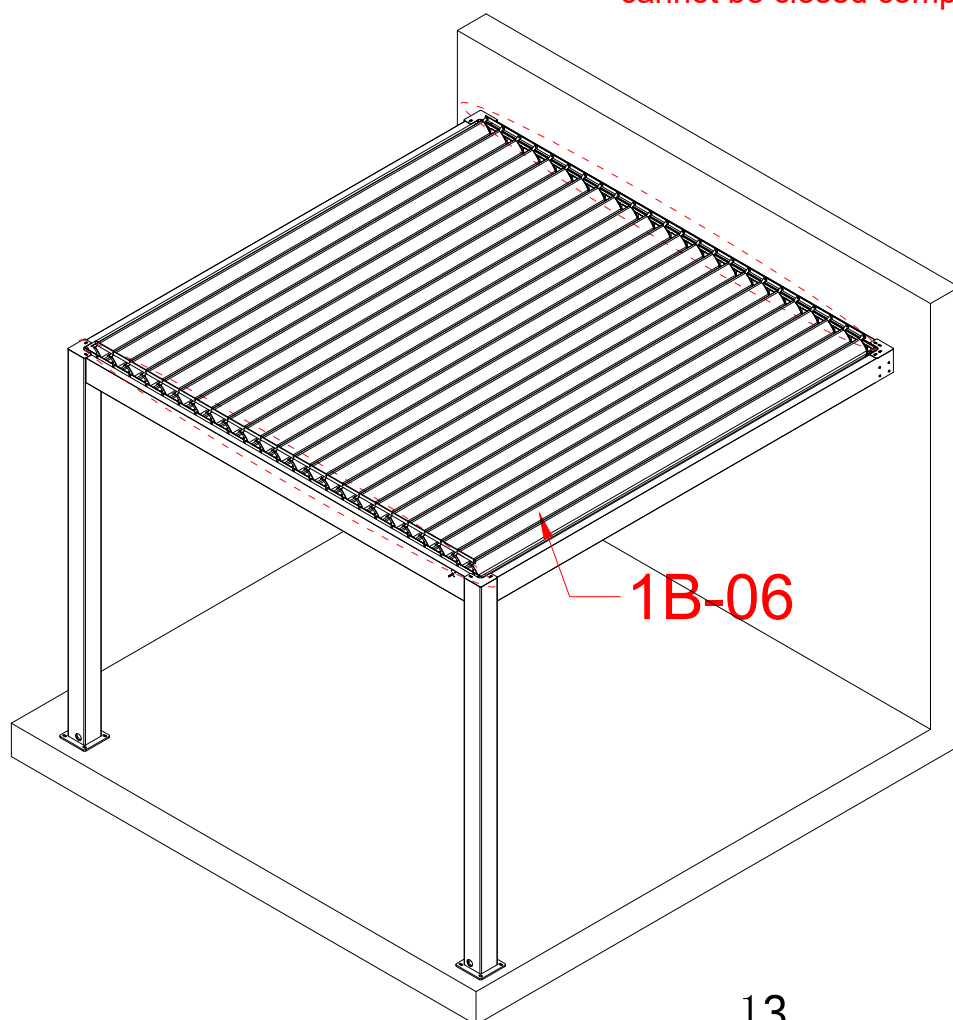


When installing louvers, first separate the two rubber gaskets and slide them to both ends of the circular shaft. Then, please ensure they are closed tightly before proceeding with the next steps of the installation.

1B-09		2
1B-20		X
1B-06		1
1B-07		x

step 13

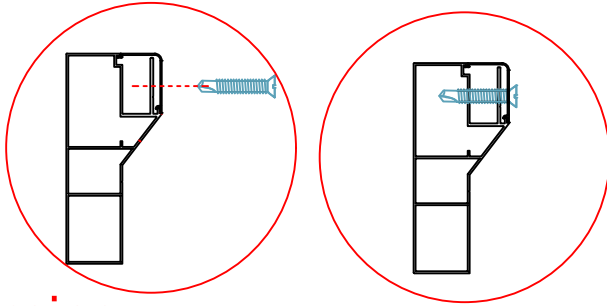
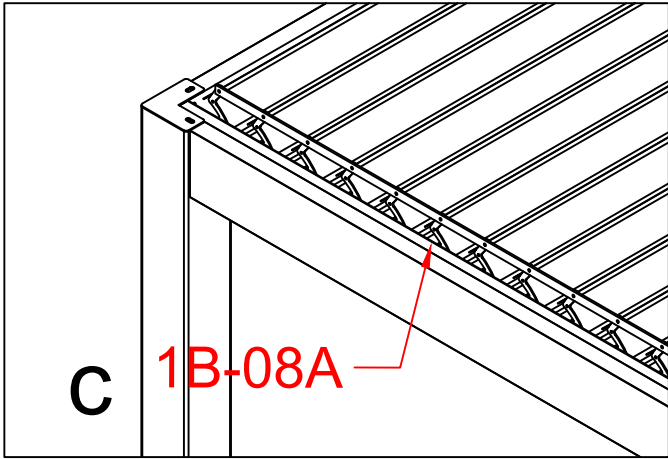
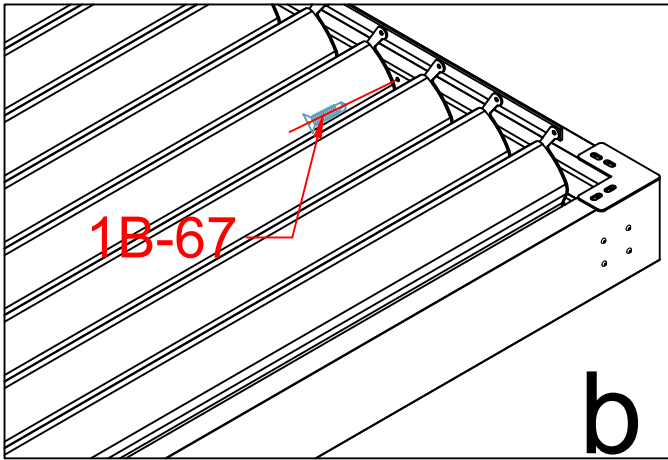
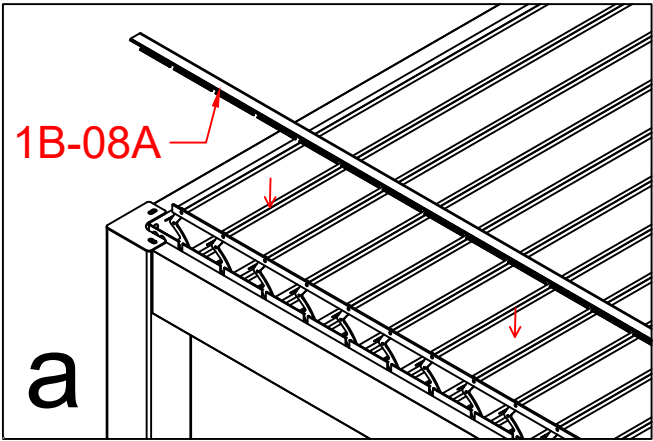



warning:
Here the screw must be
hit, do not miss

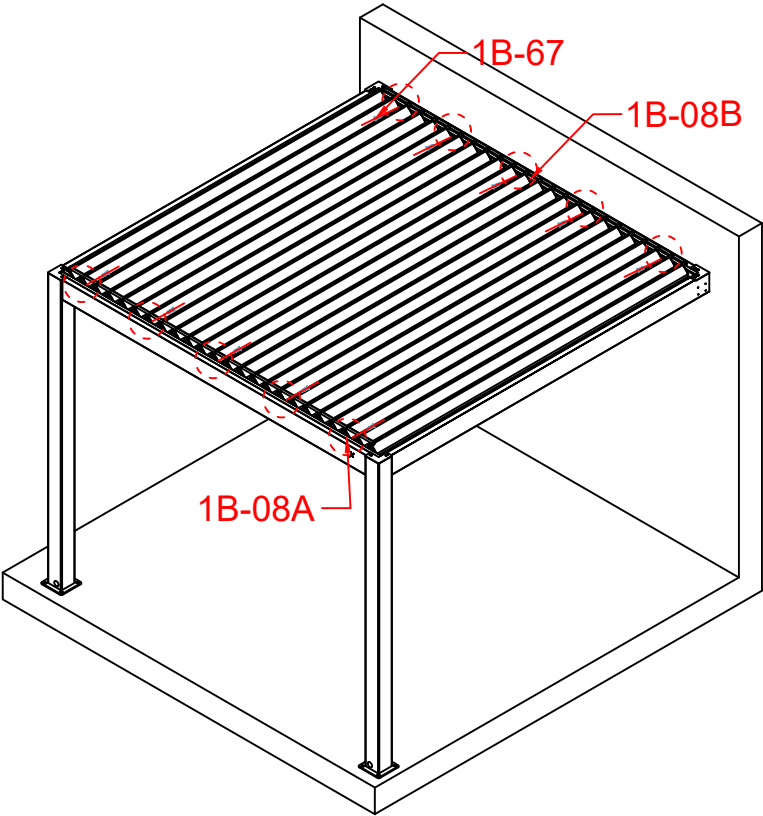


1B-67		3x3m 10
		3x4m 14
1B-08		2

step 14

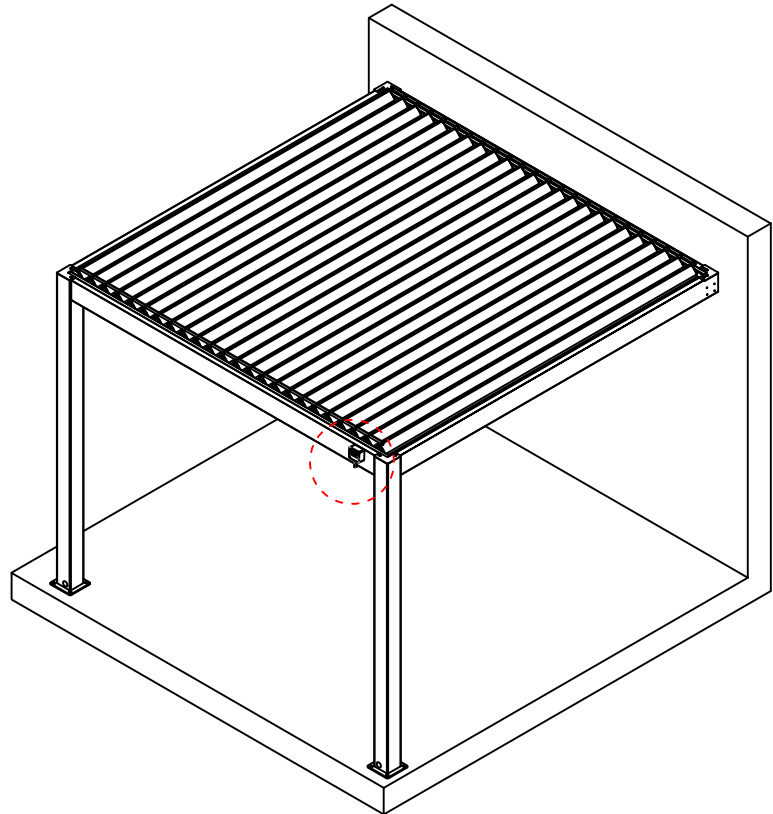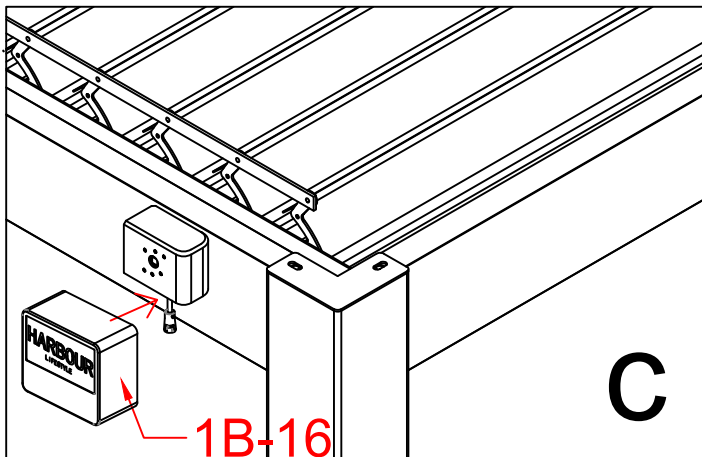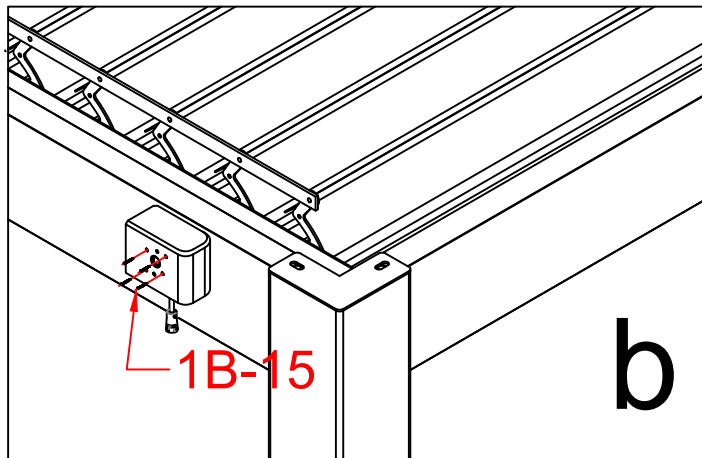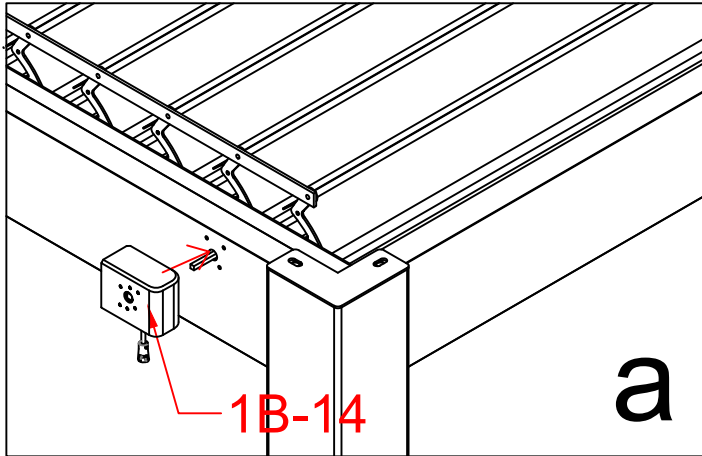


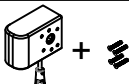
1B-14	 + 	1
1B-16		1

step 15

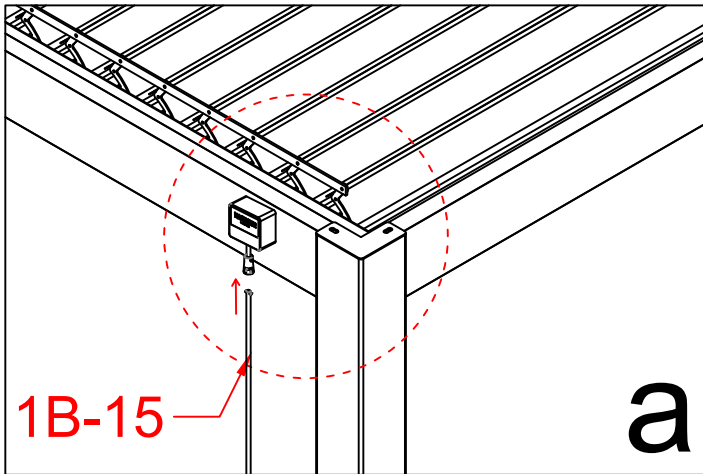





Warning :

In Snow season or in case of snow forecast open up your shutters in vertical position to avoid any damaging on your pergola. .

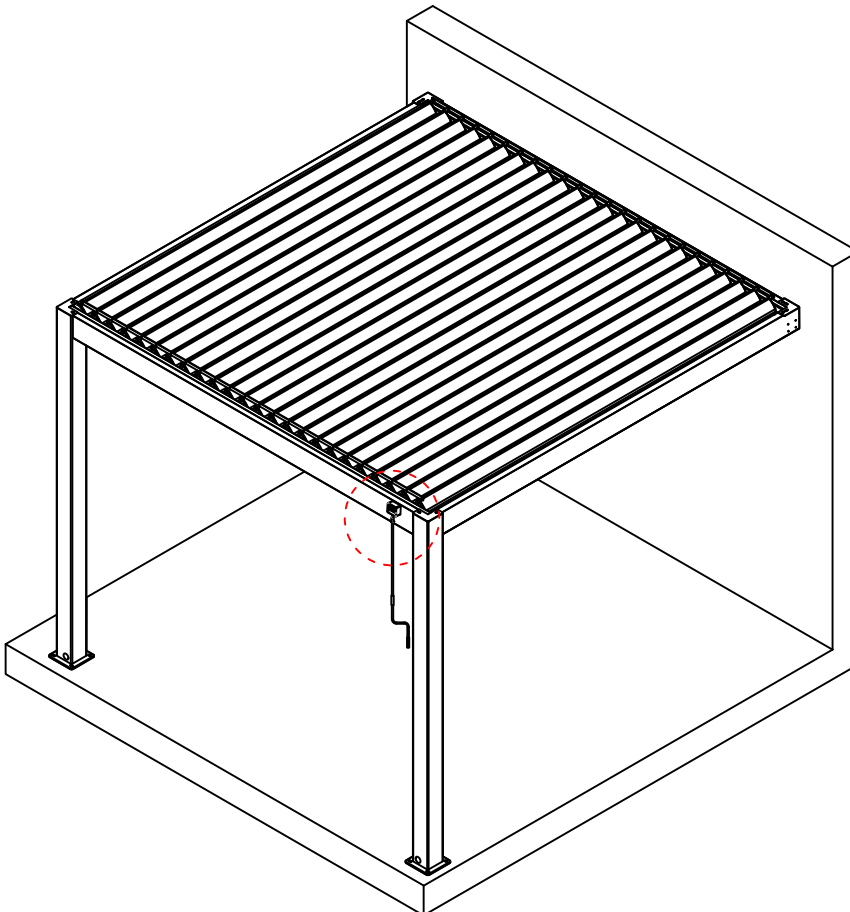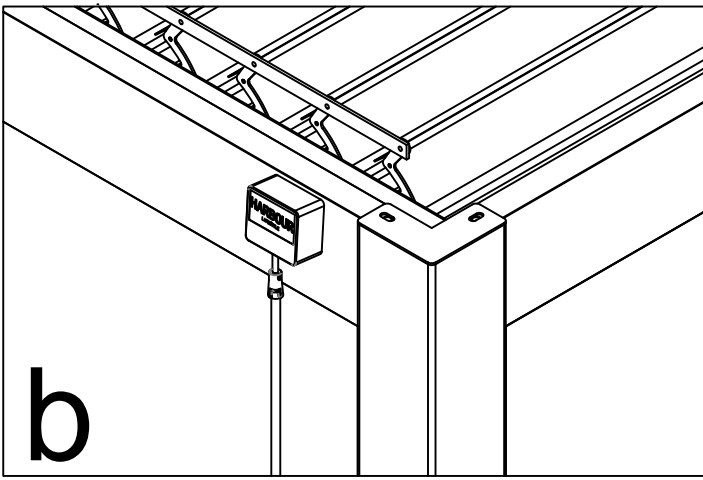






1B-15		1
-------	--	---

step 16

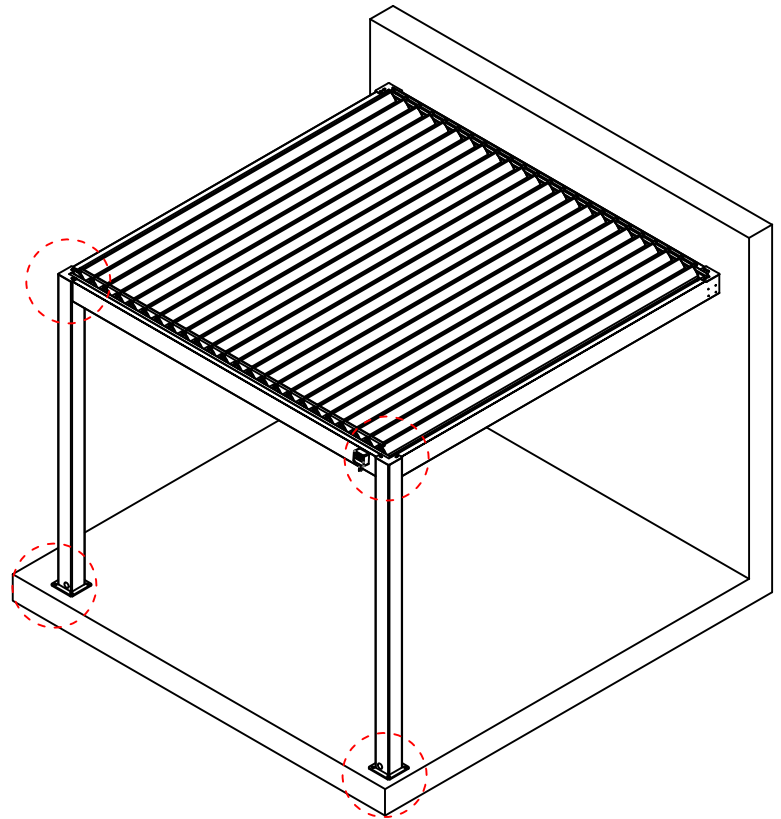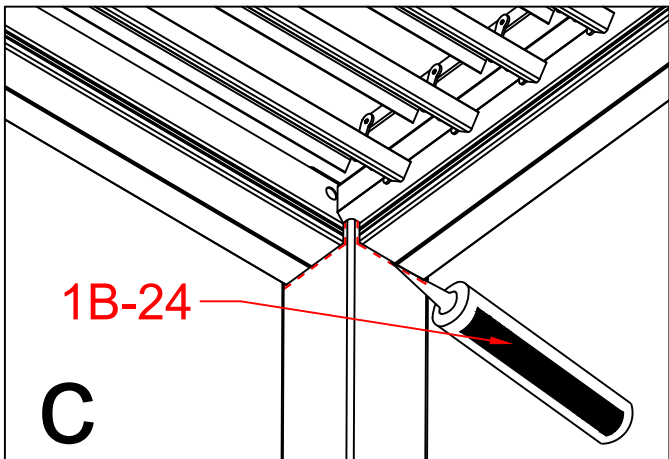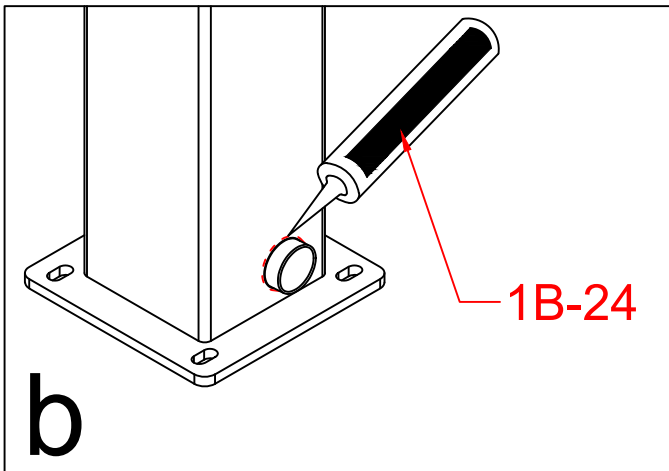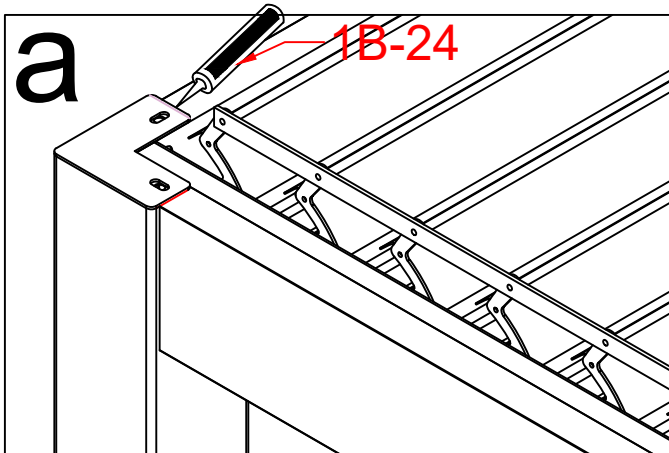

1B-24		1
-------	---	---

step 17

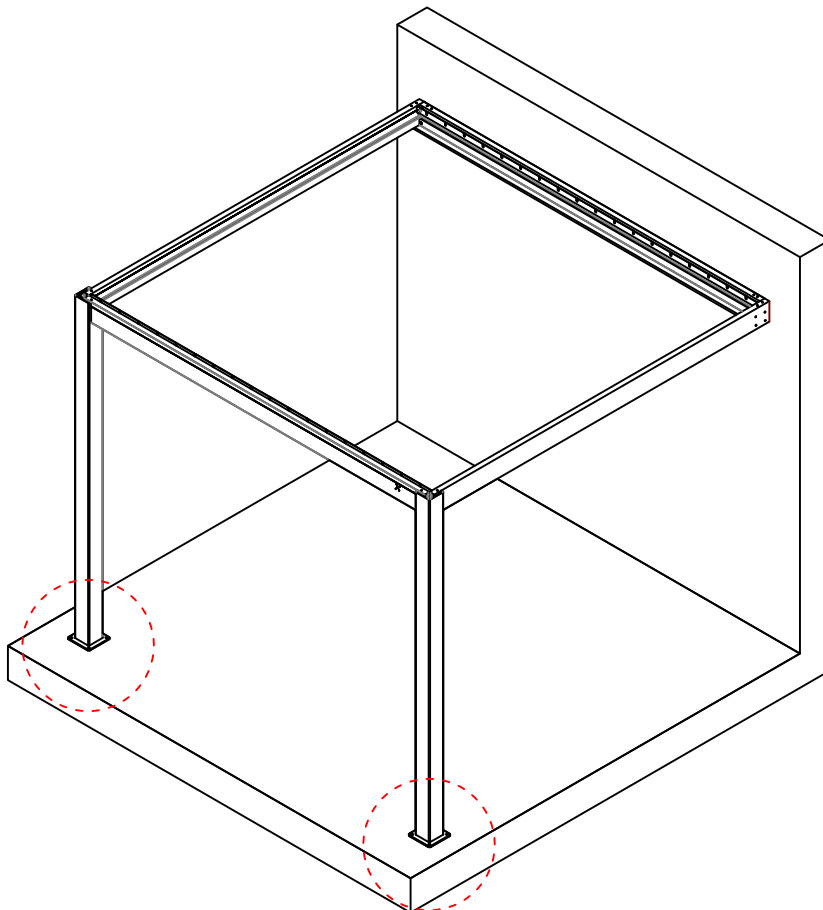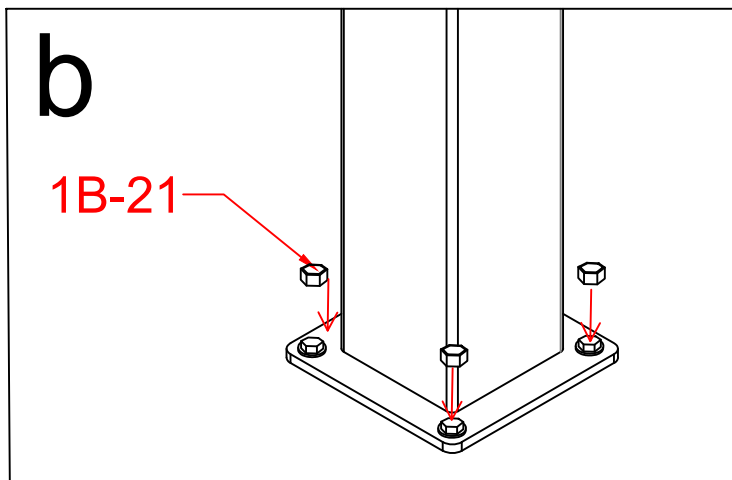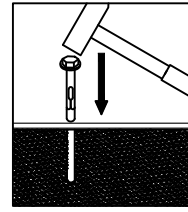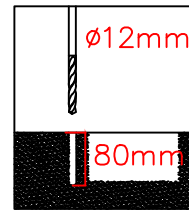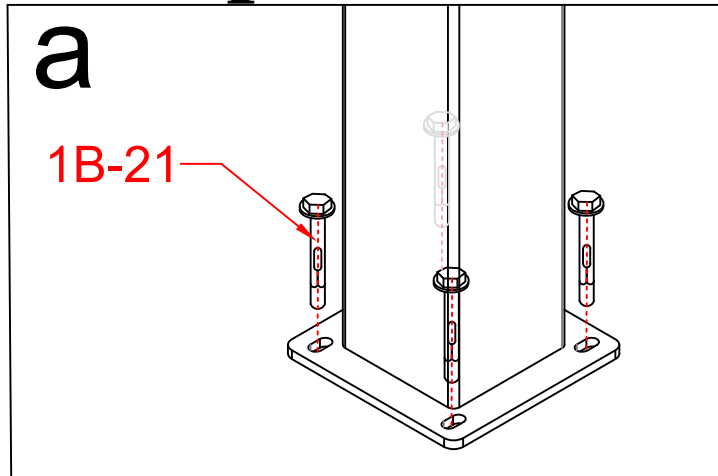

1B-21		8
-------	---	---

HARBOUR

LIFESTYLE